

## Air rail


Assembly Instructions

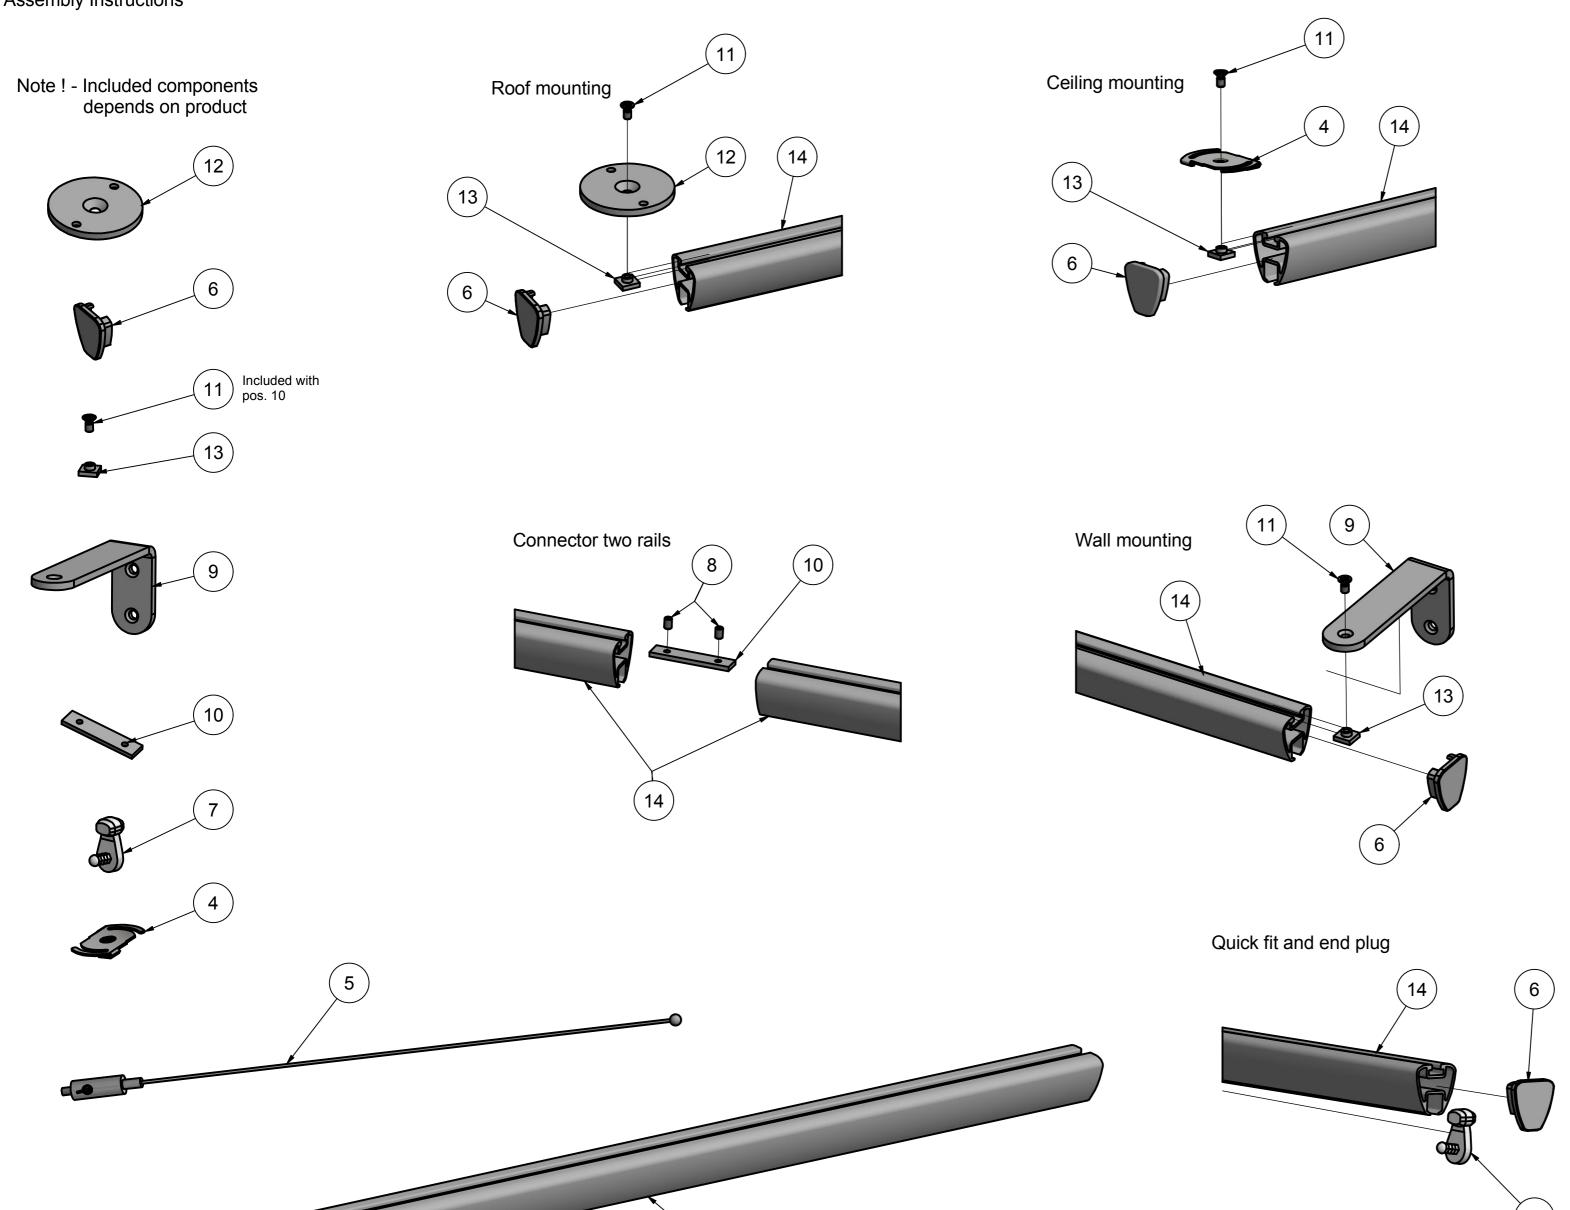

(14)

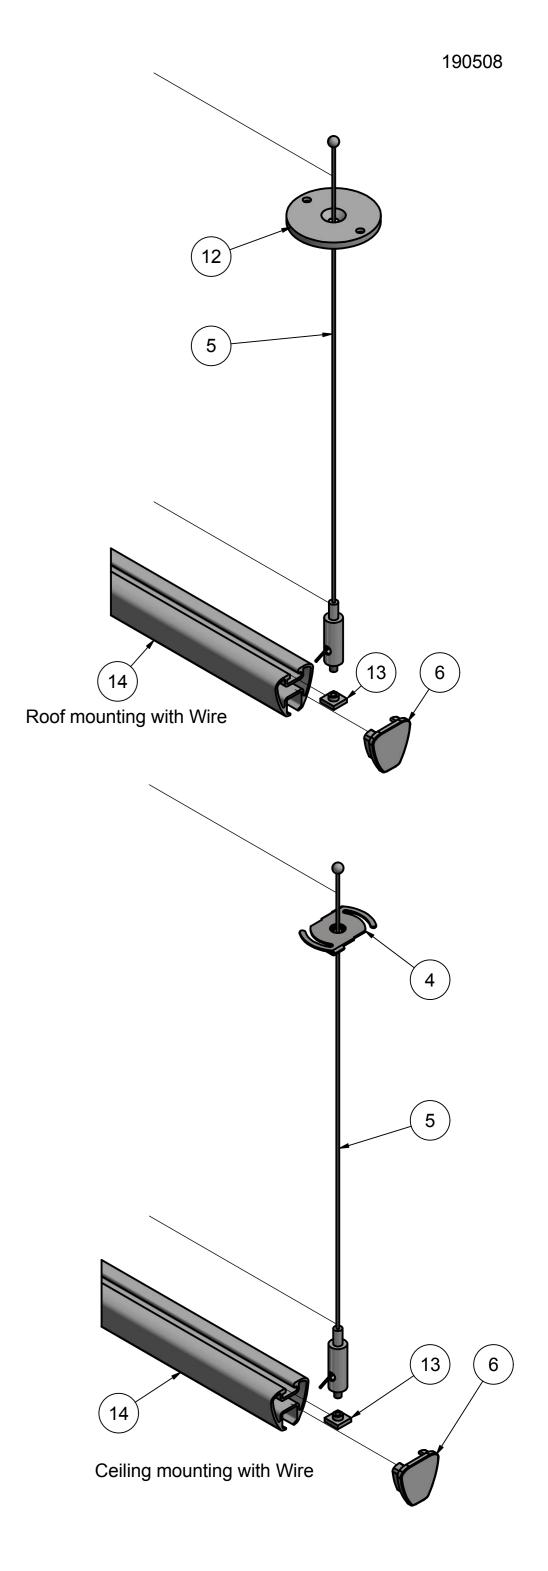

## 190508

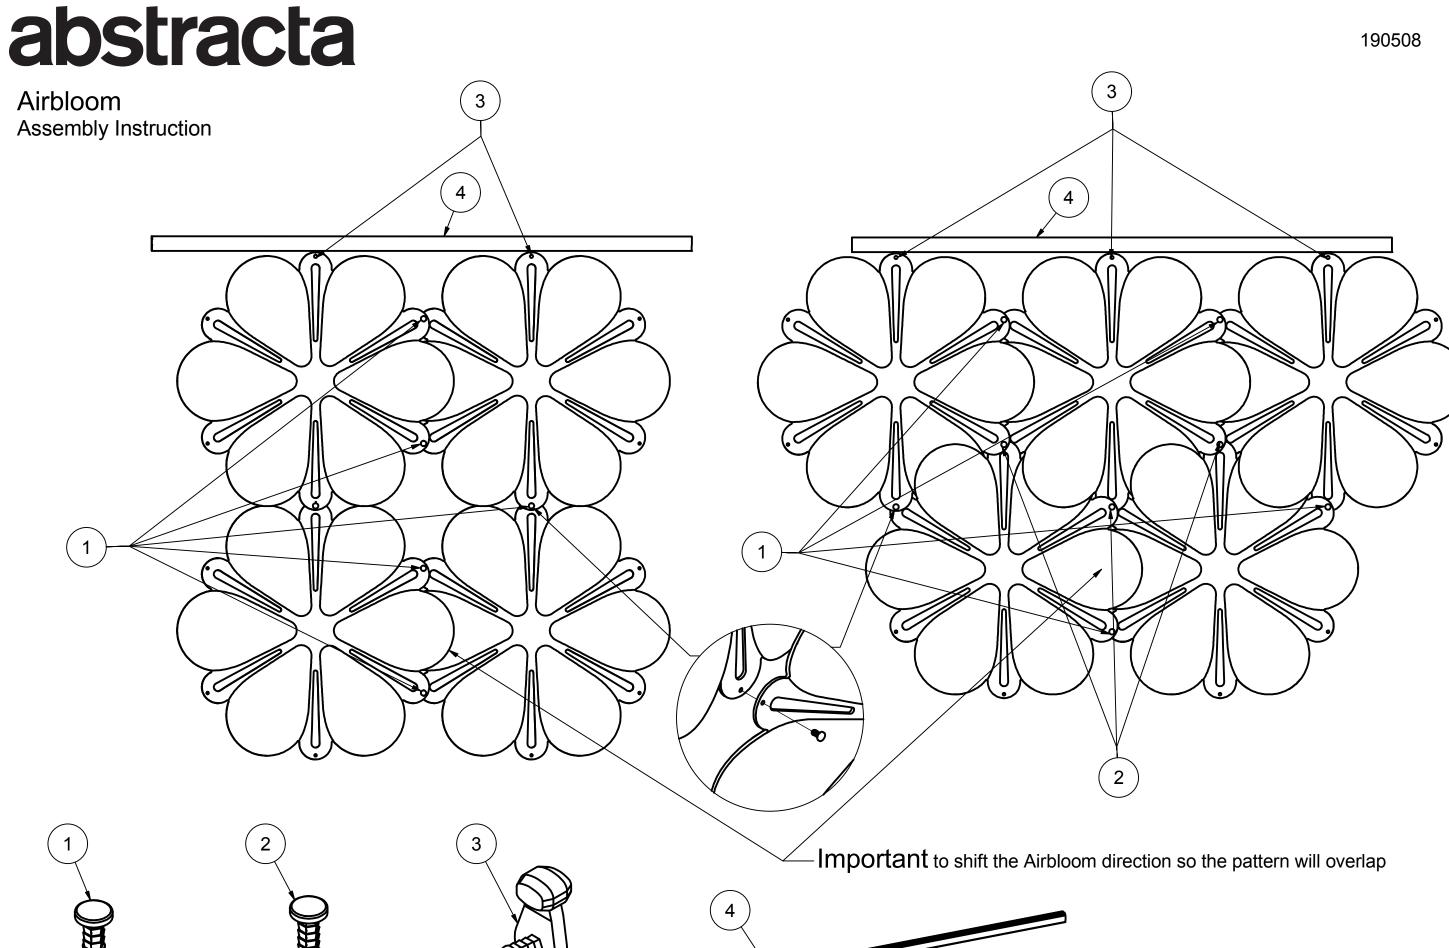

Connects two Airbloom Connects three Airbloom

Connects Airbloom to rail (Not included)

Airflake Rail

## abstracta

Airbloom
Assembly Instruction

