 



# Assembly Guide

E37379 / E37380 Malmö DVD with drawers

E37381 / E37382 Malmö DVD without drawers

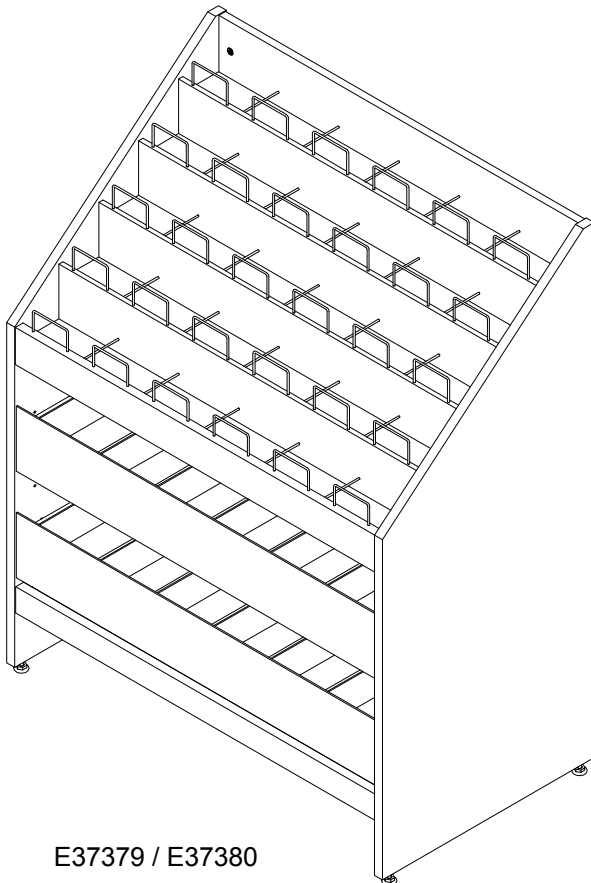

 E37379 / E37380

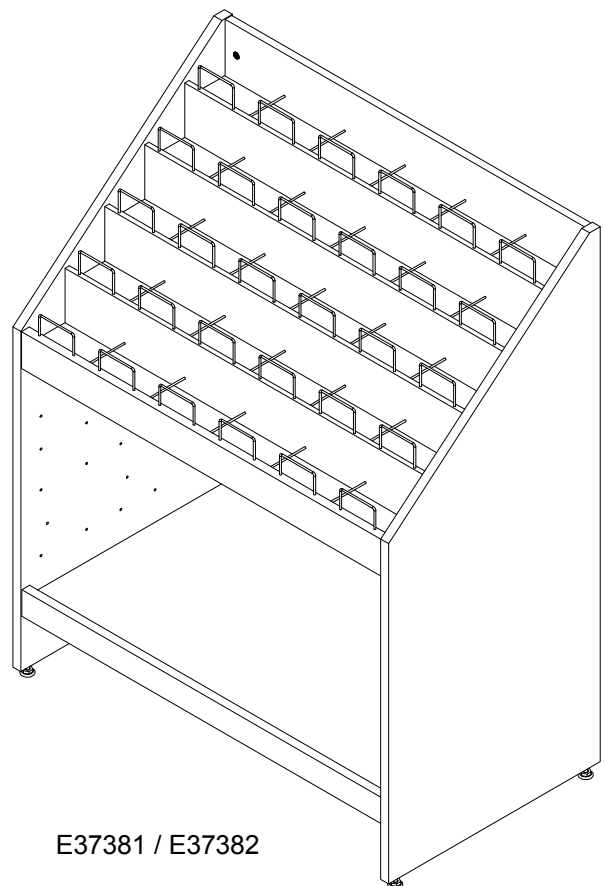


E37381 / E37382

2018.09

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.


# Assembly Guide
 
## E37379 / E37380 Malmö DVD with drawers

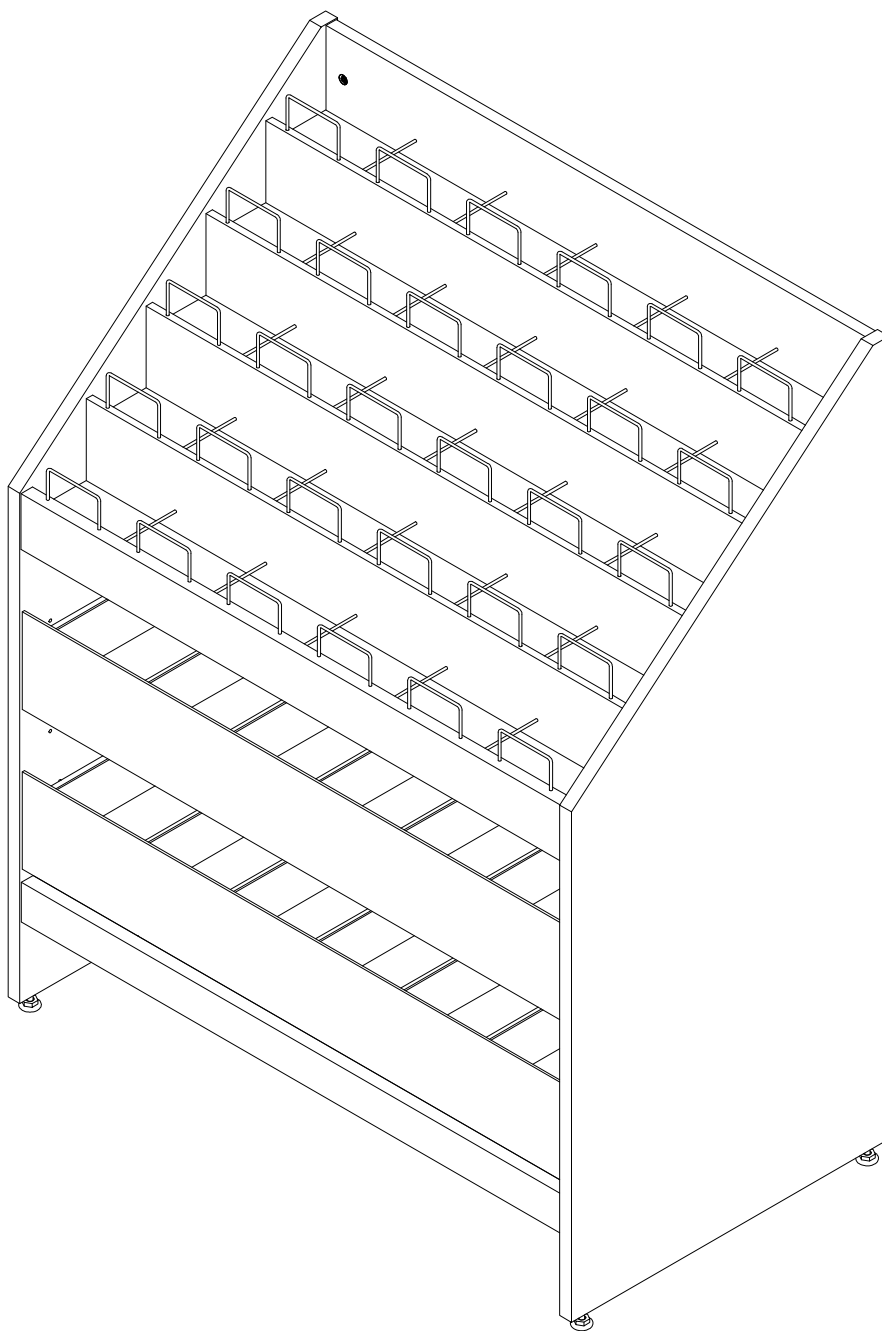


2018.09

 
First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.

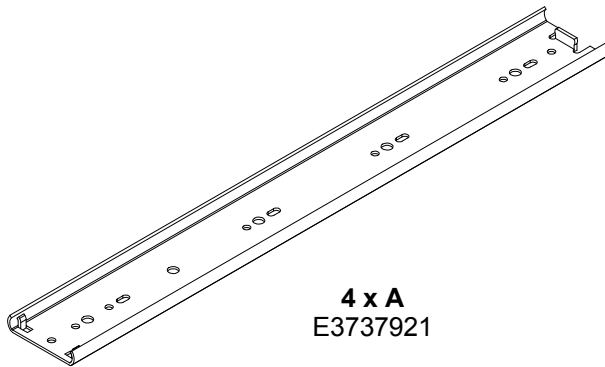


**4 x A**  
E3737921

 


**16 x B**  
E3437925

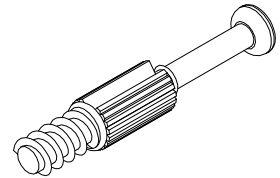 


**6 x C**  
E3437925

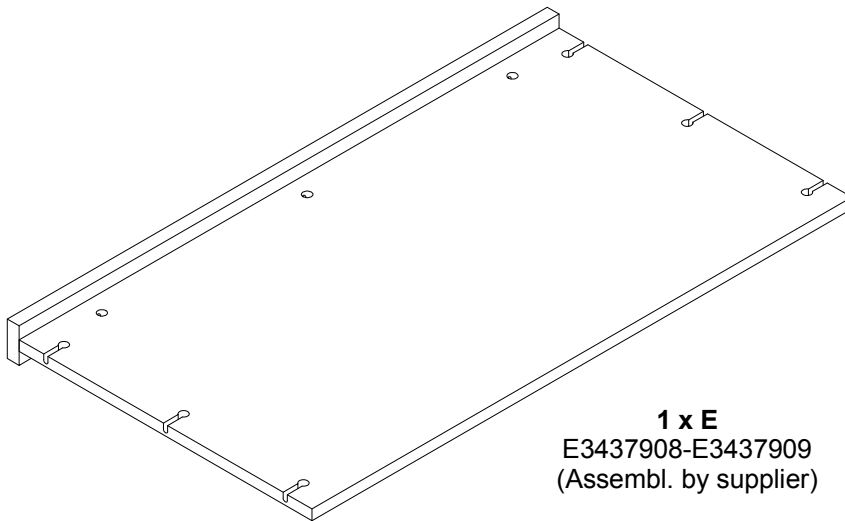 

 
**1 x E**  
E3437908-E3437909  
(Assembl. by supplier)

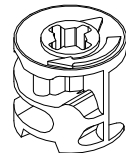



**6 x D**  
E76402

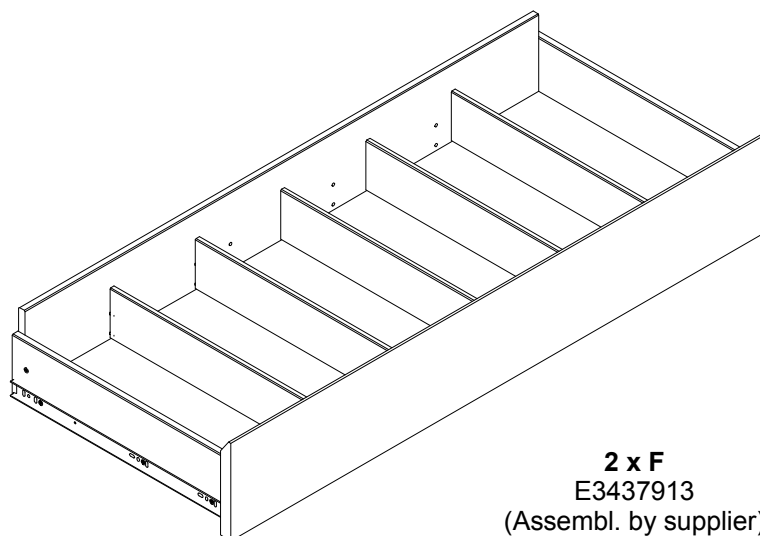 


     
**2 x F**  
E3437913  
(Assembl. by supplier)

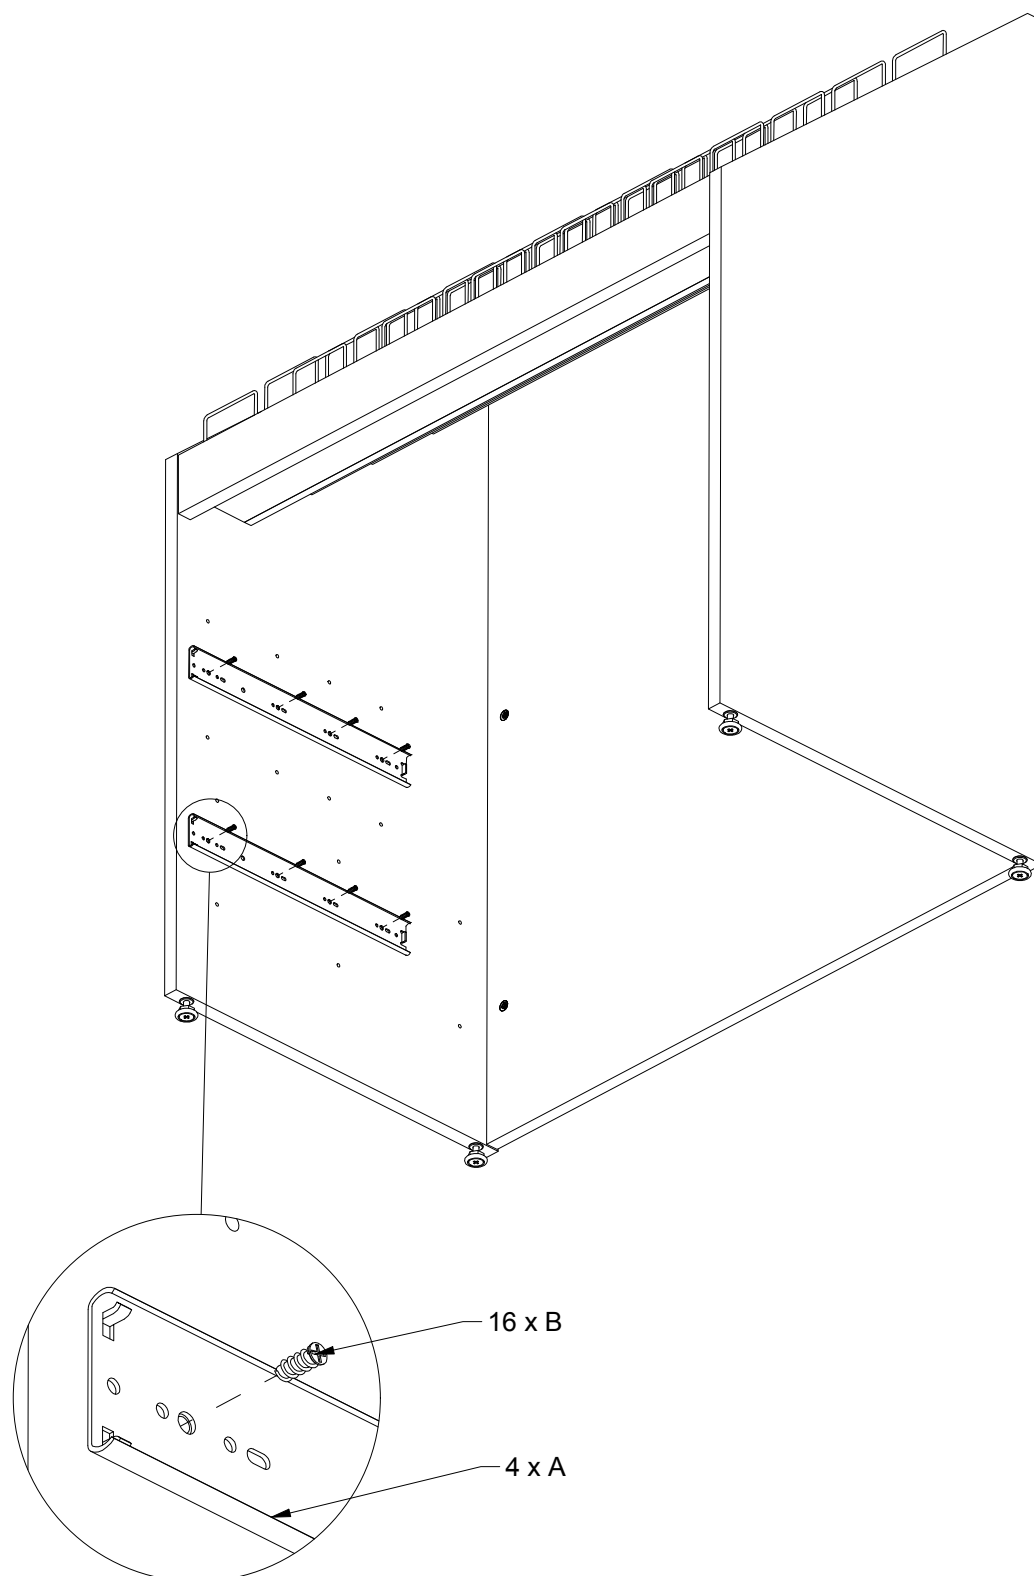

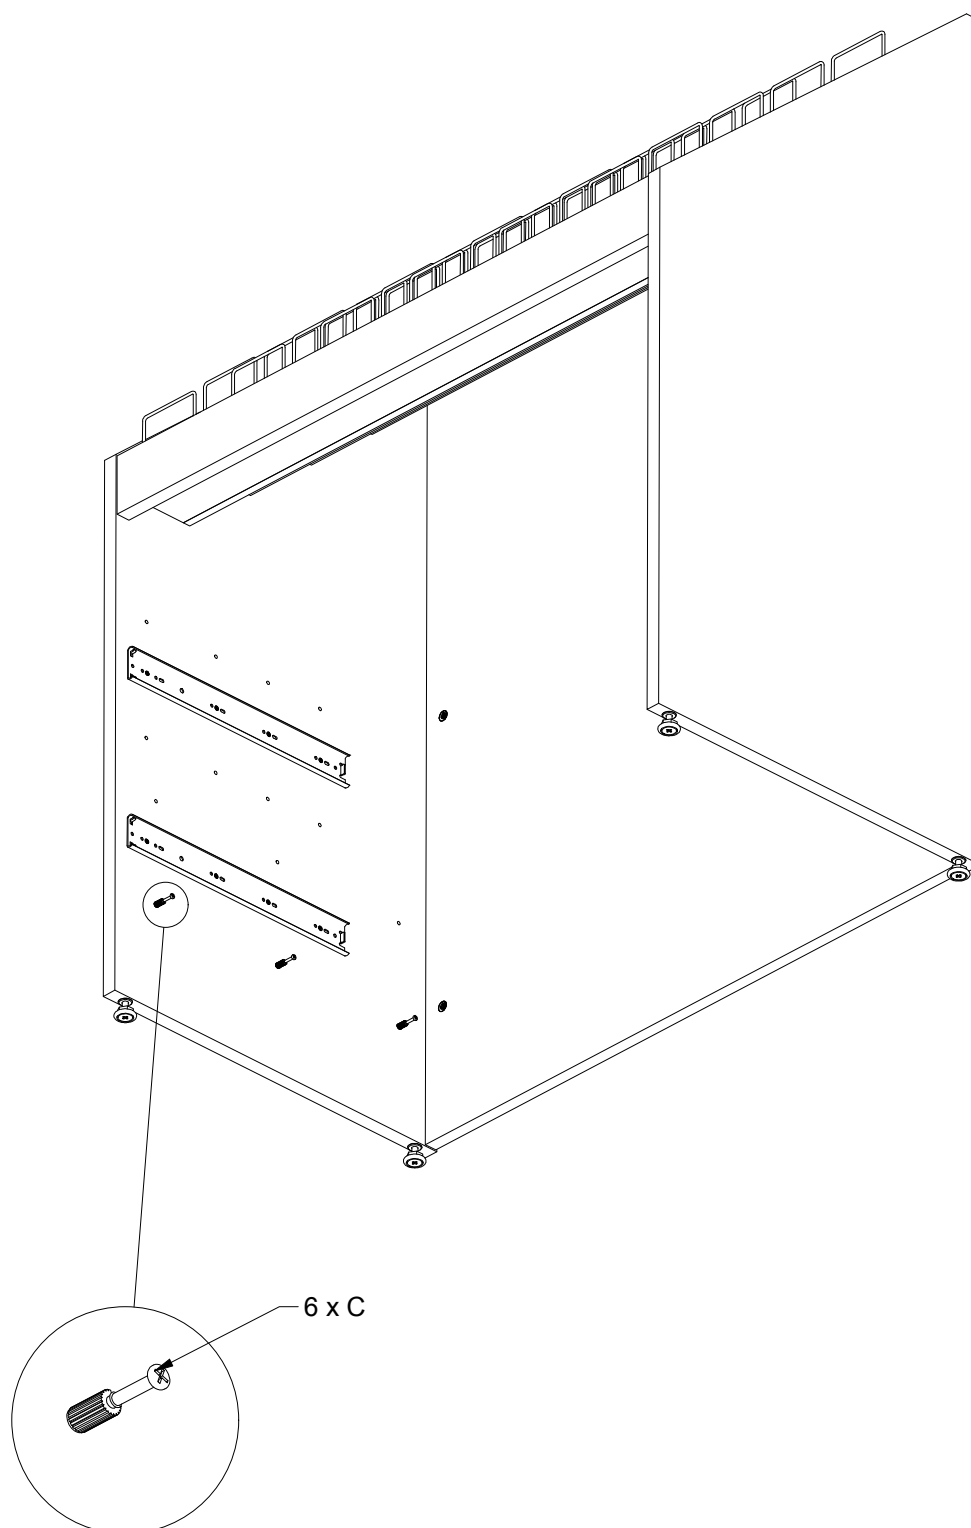

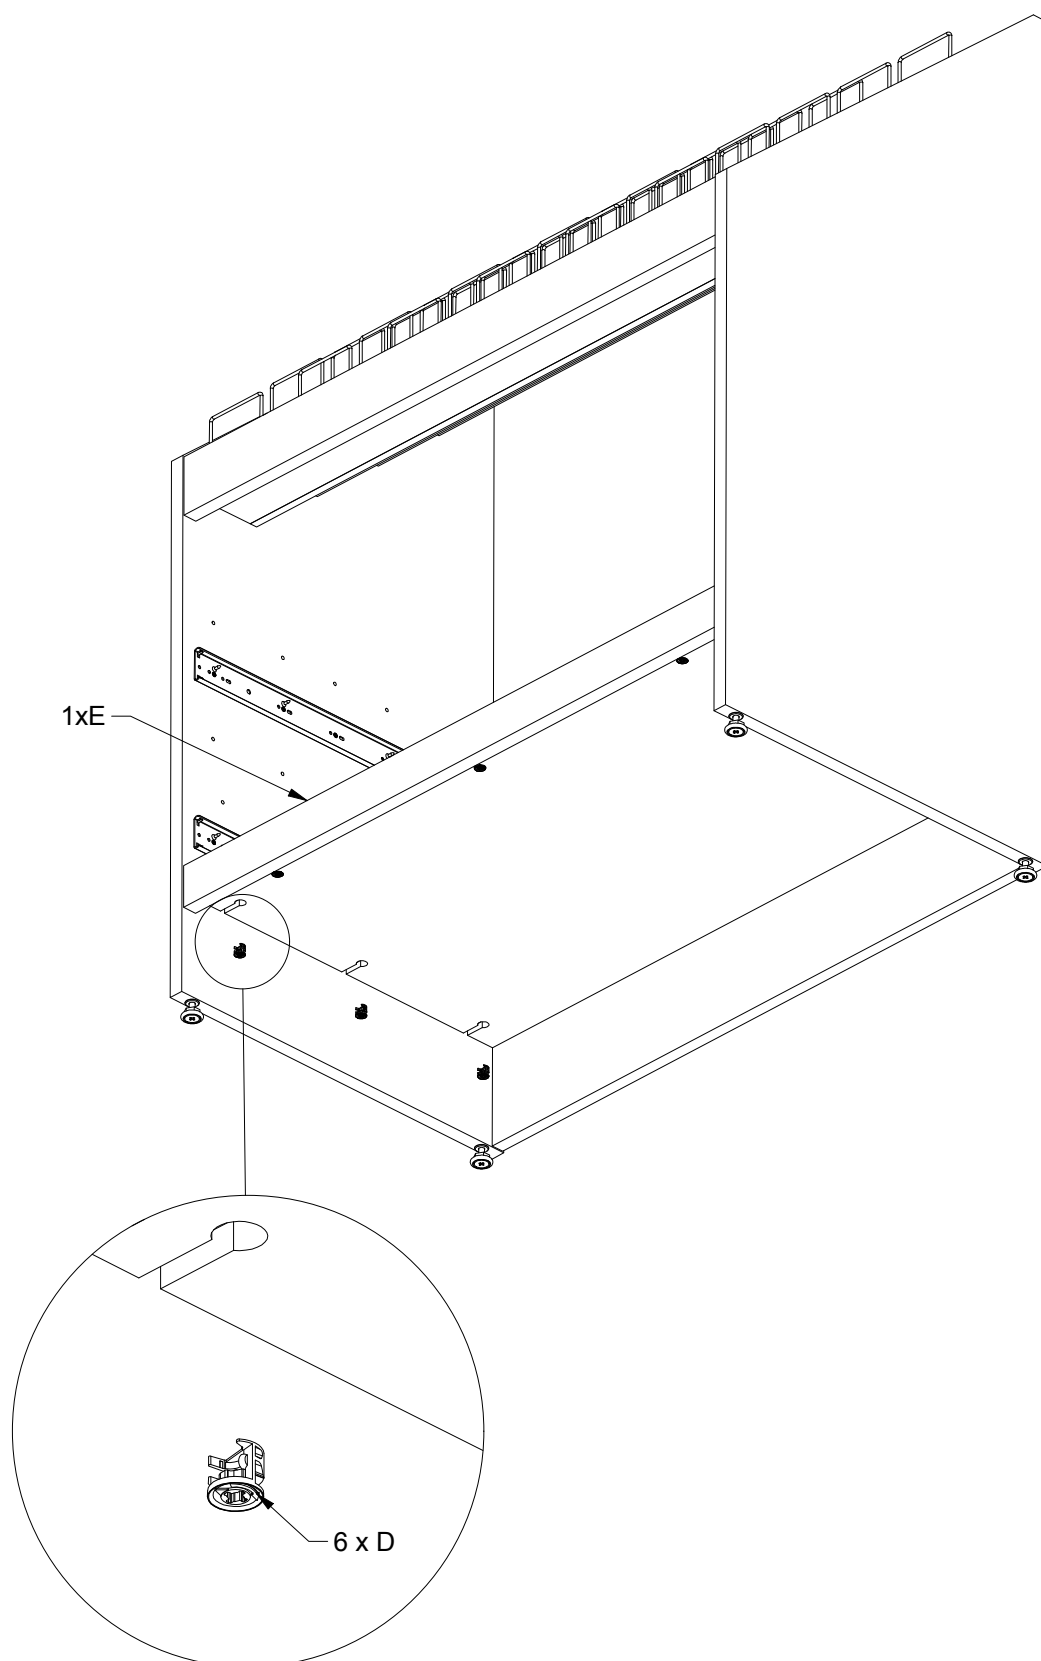


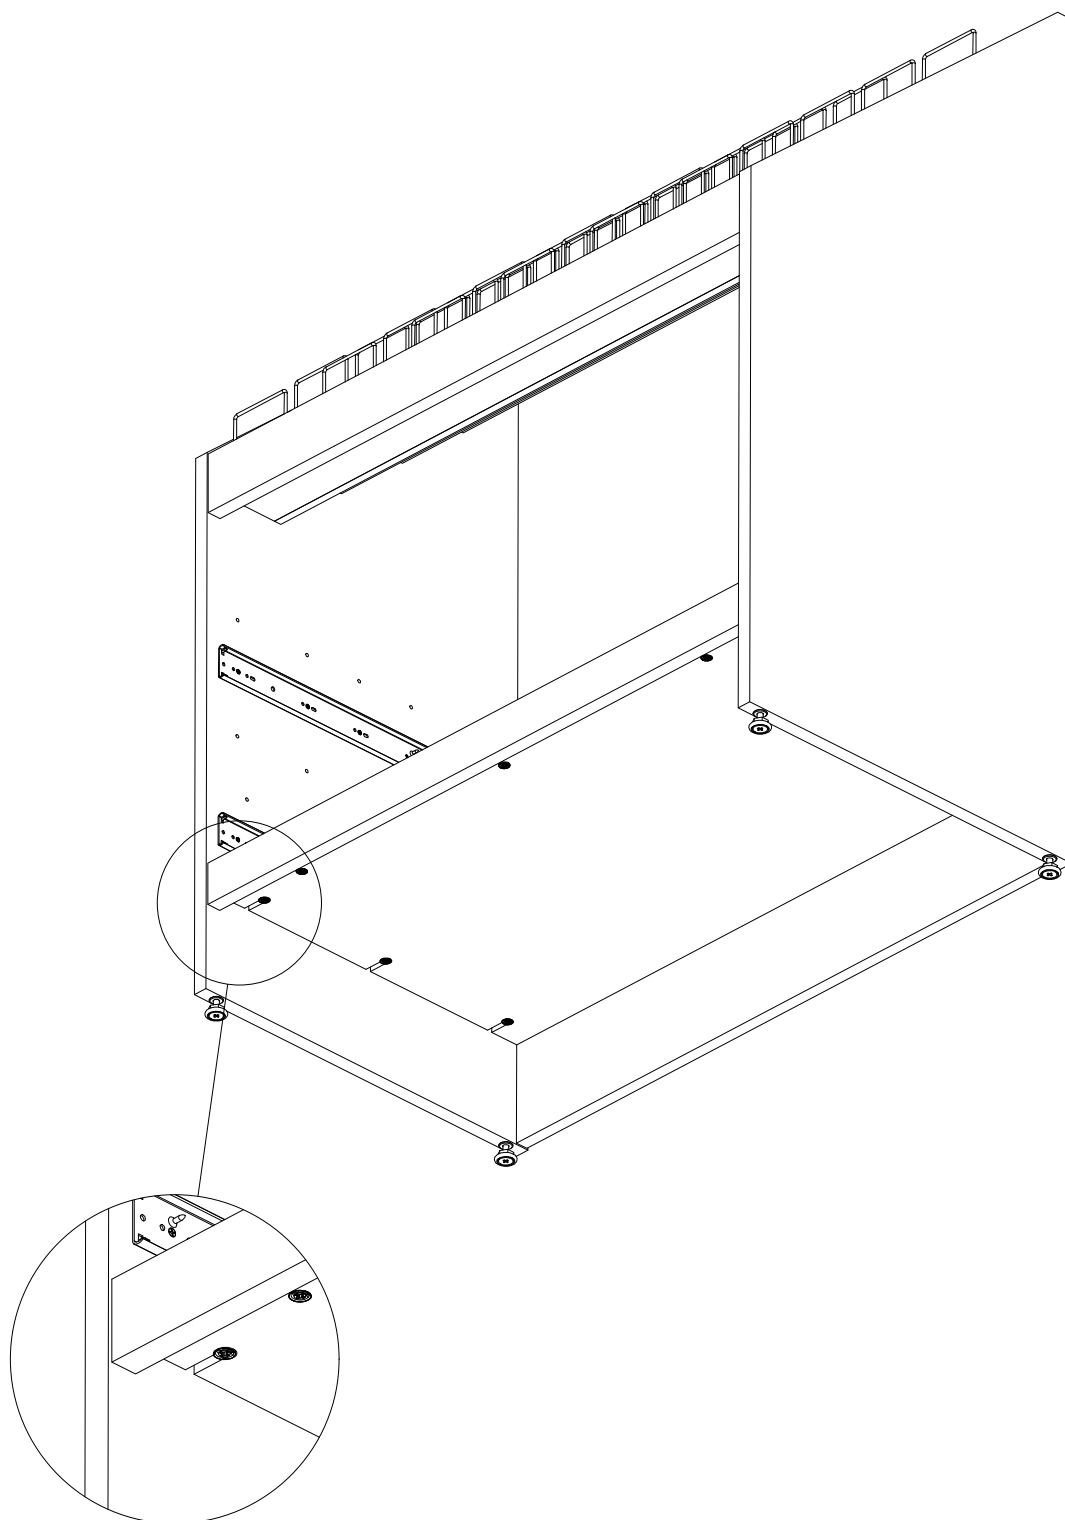

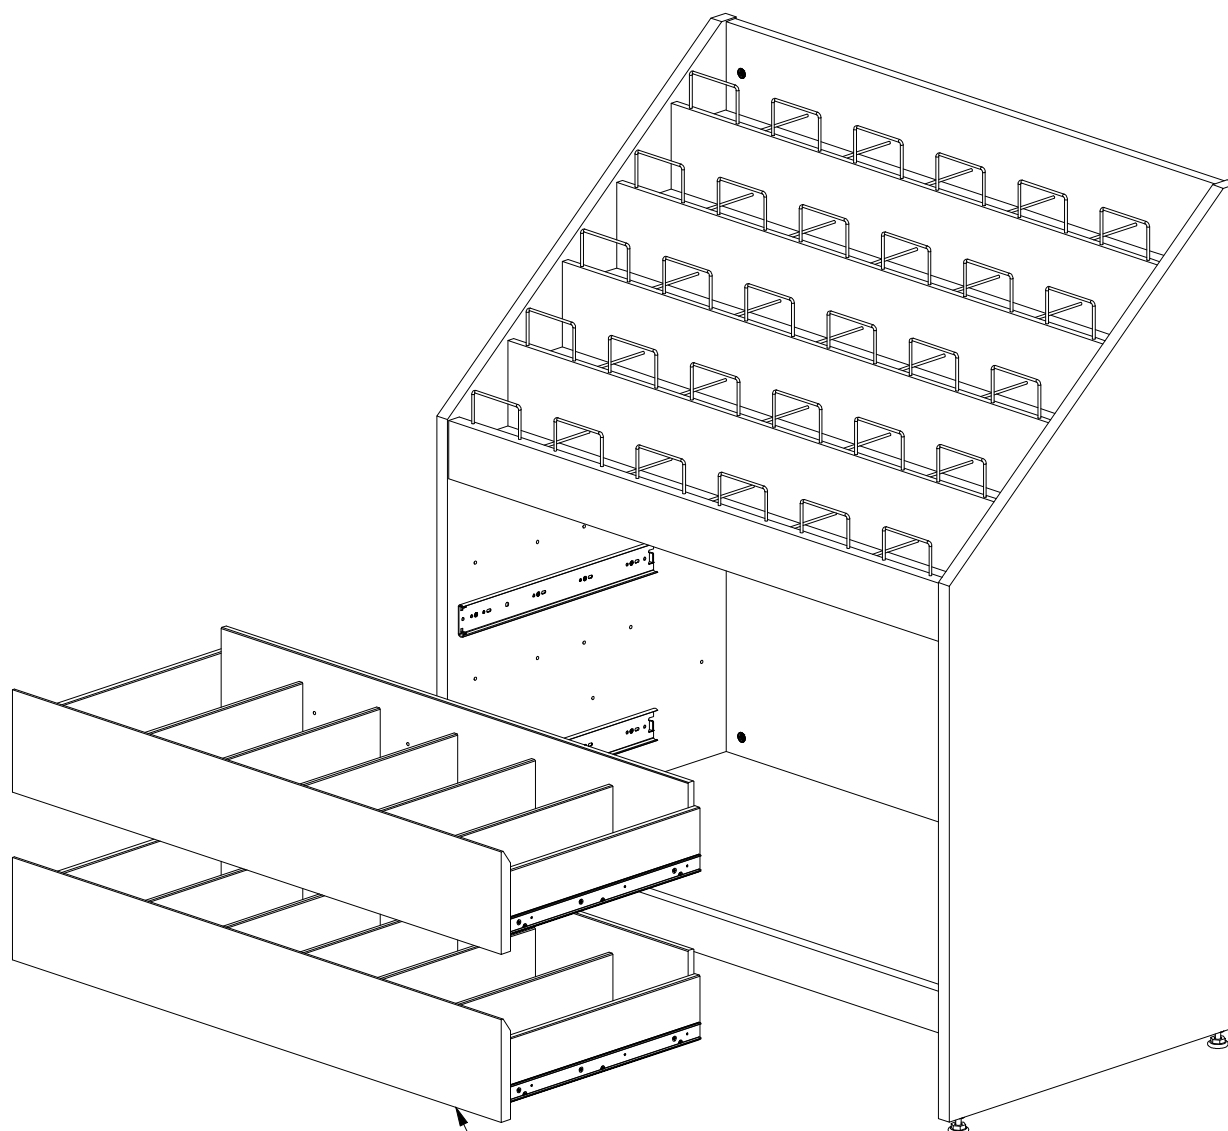

 
**2 x F**  
Not used in item no.  
E37381 / E37382



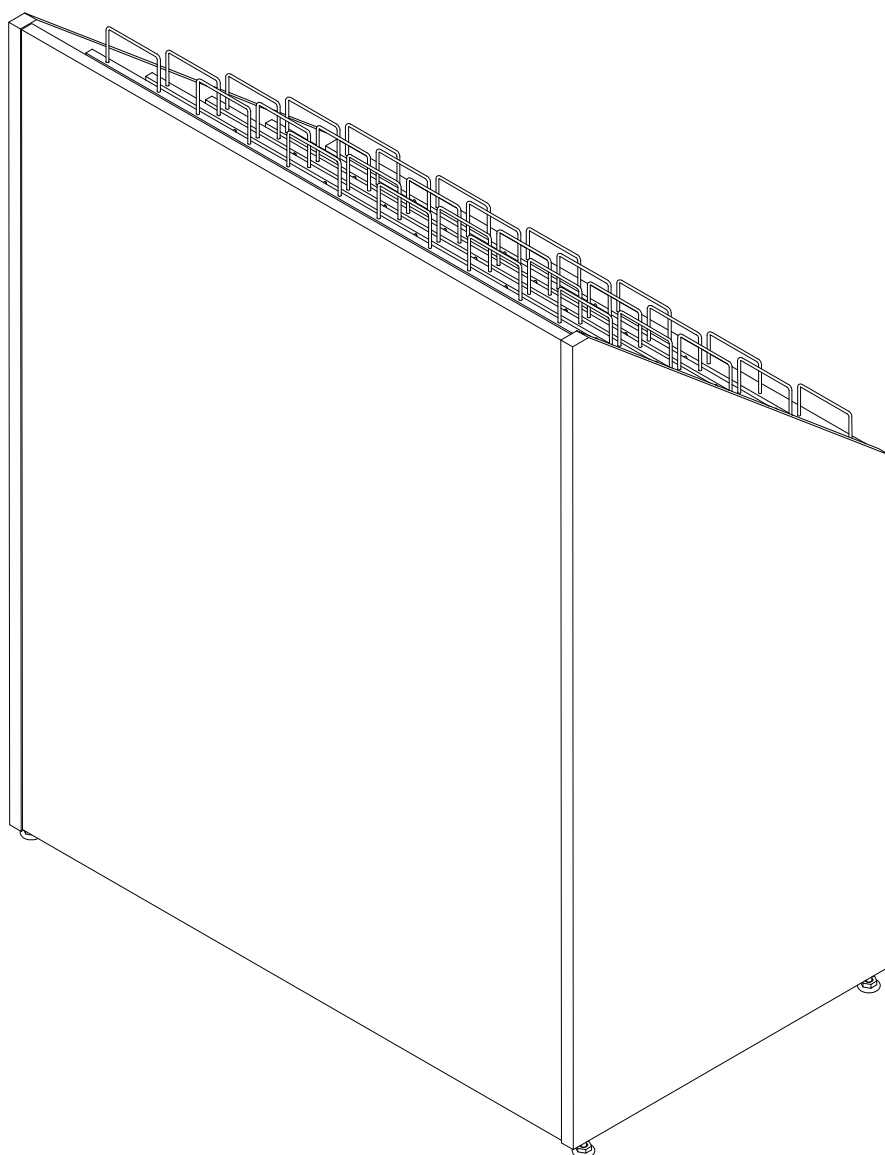


# Assembly Guide
 
## E37381 / E37382 Malmö DVD without drawers

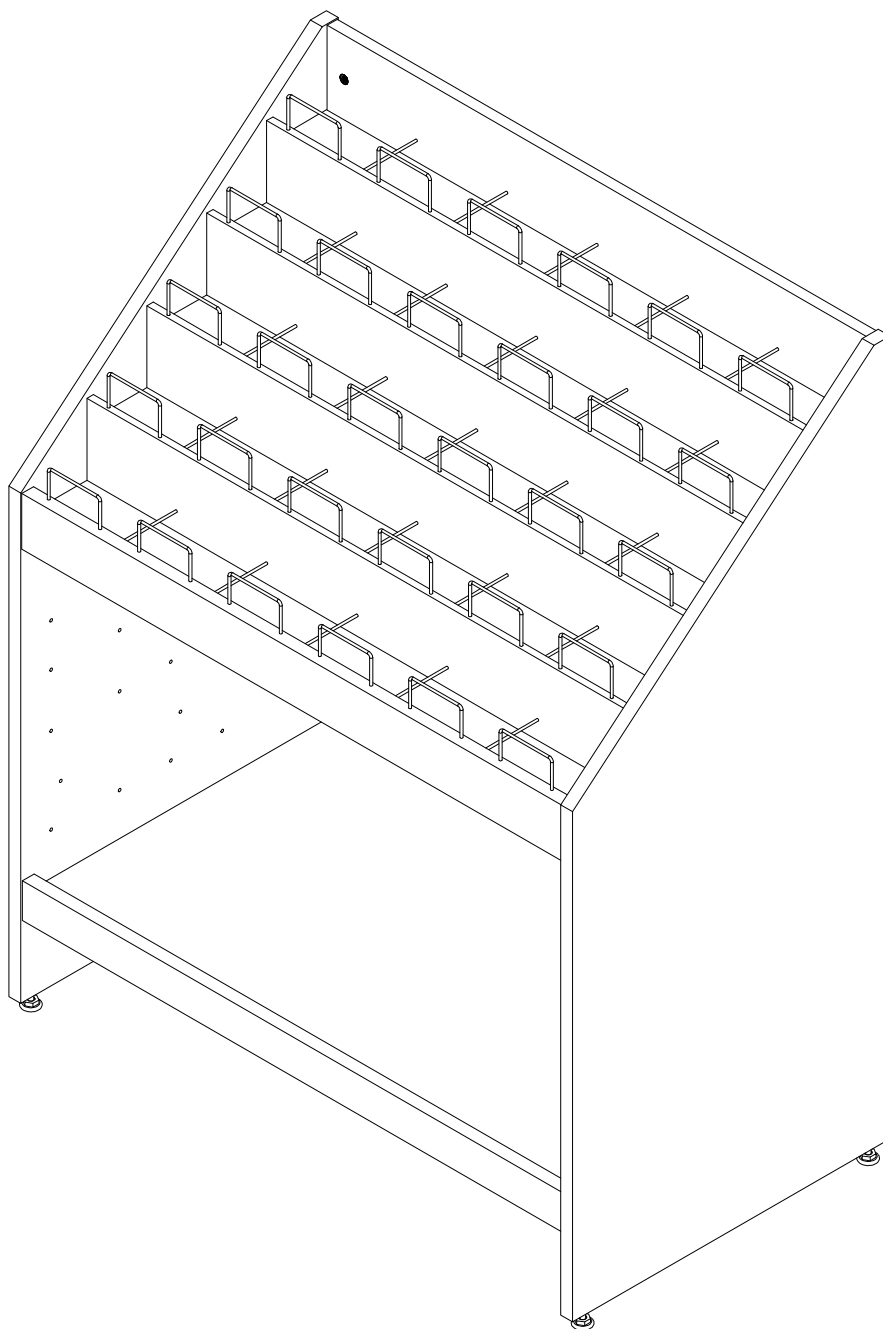


2018.09

 
First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.

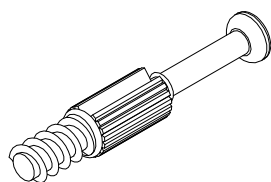


**6 x A**  
E3437925

 


**6 x B**  
E76402

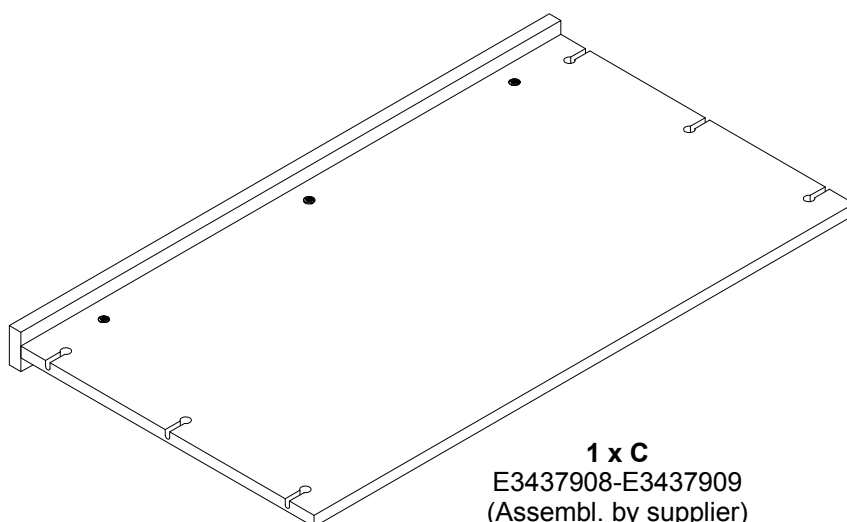 

  
**1 x C**  
E3437908-E3437909  
(Assembl. by supplier)

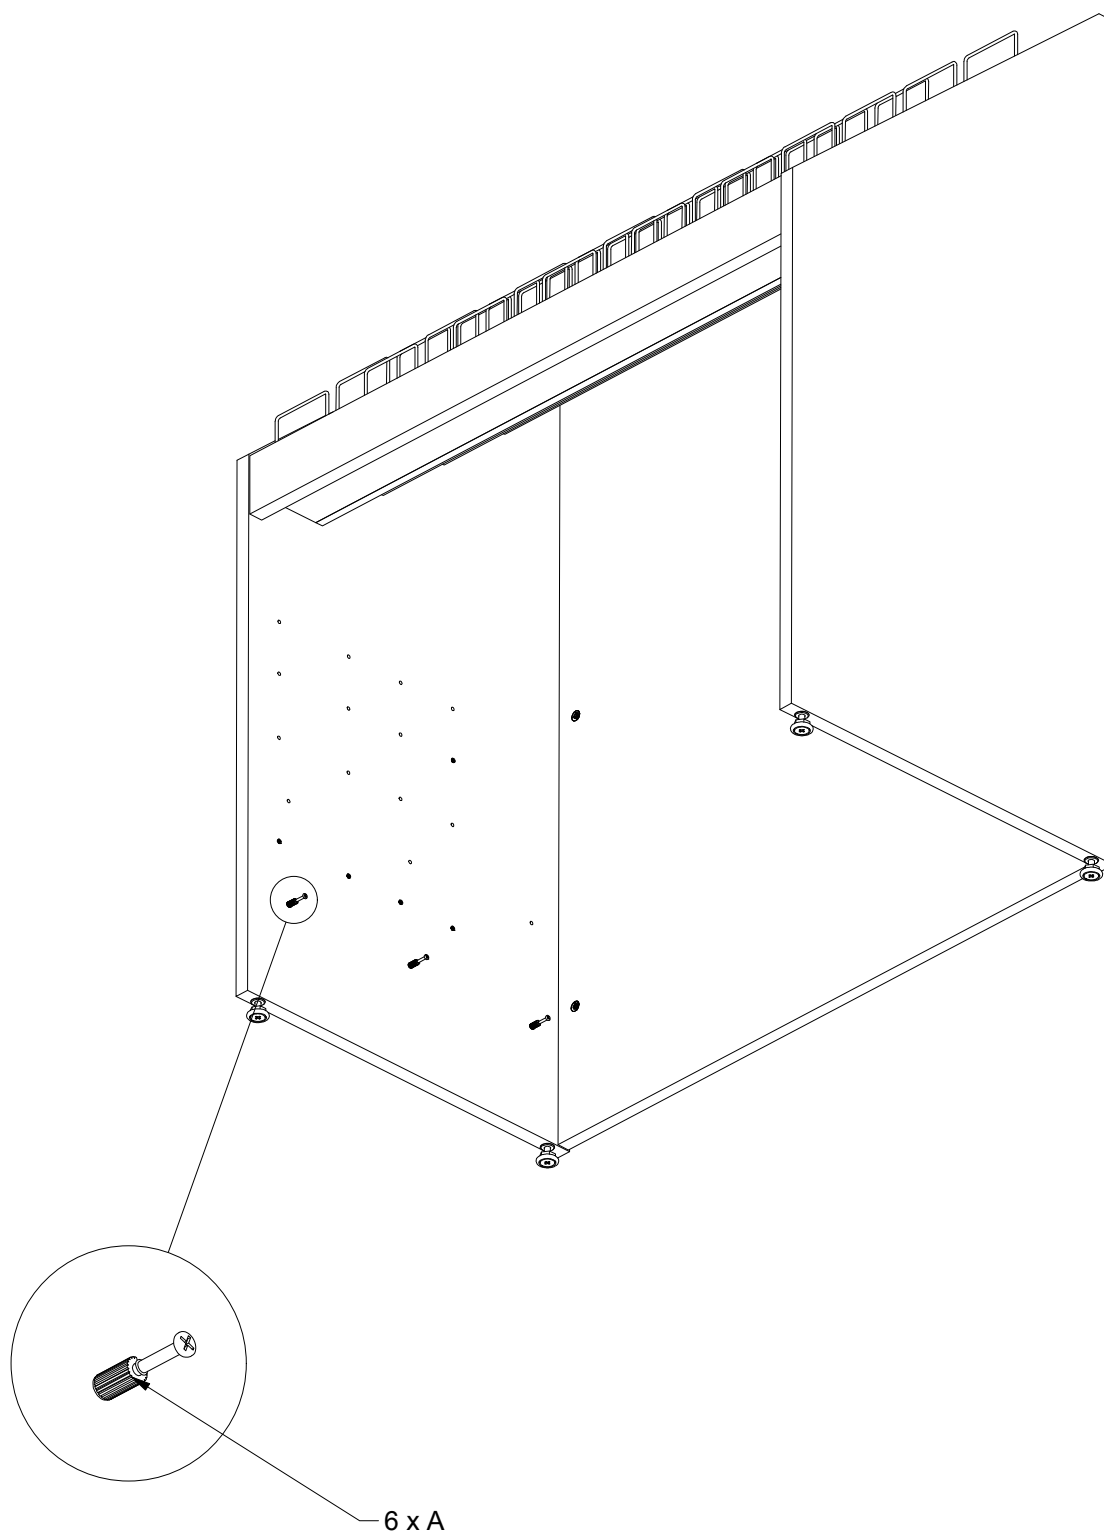

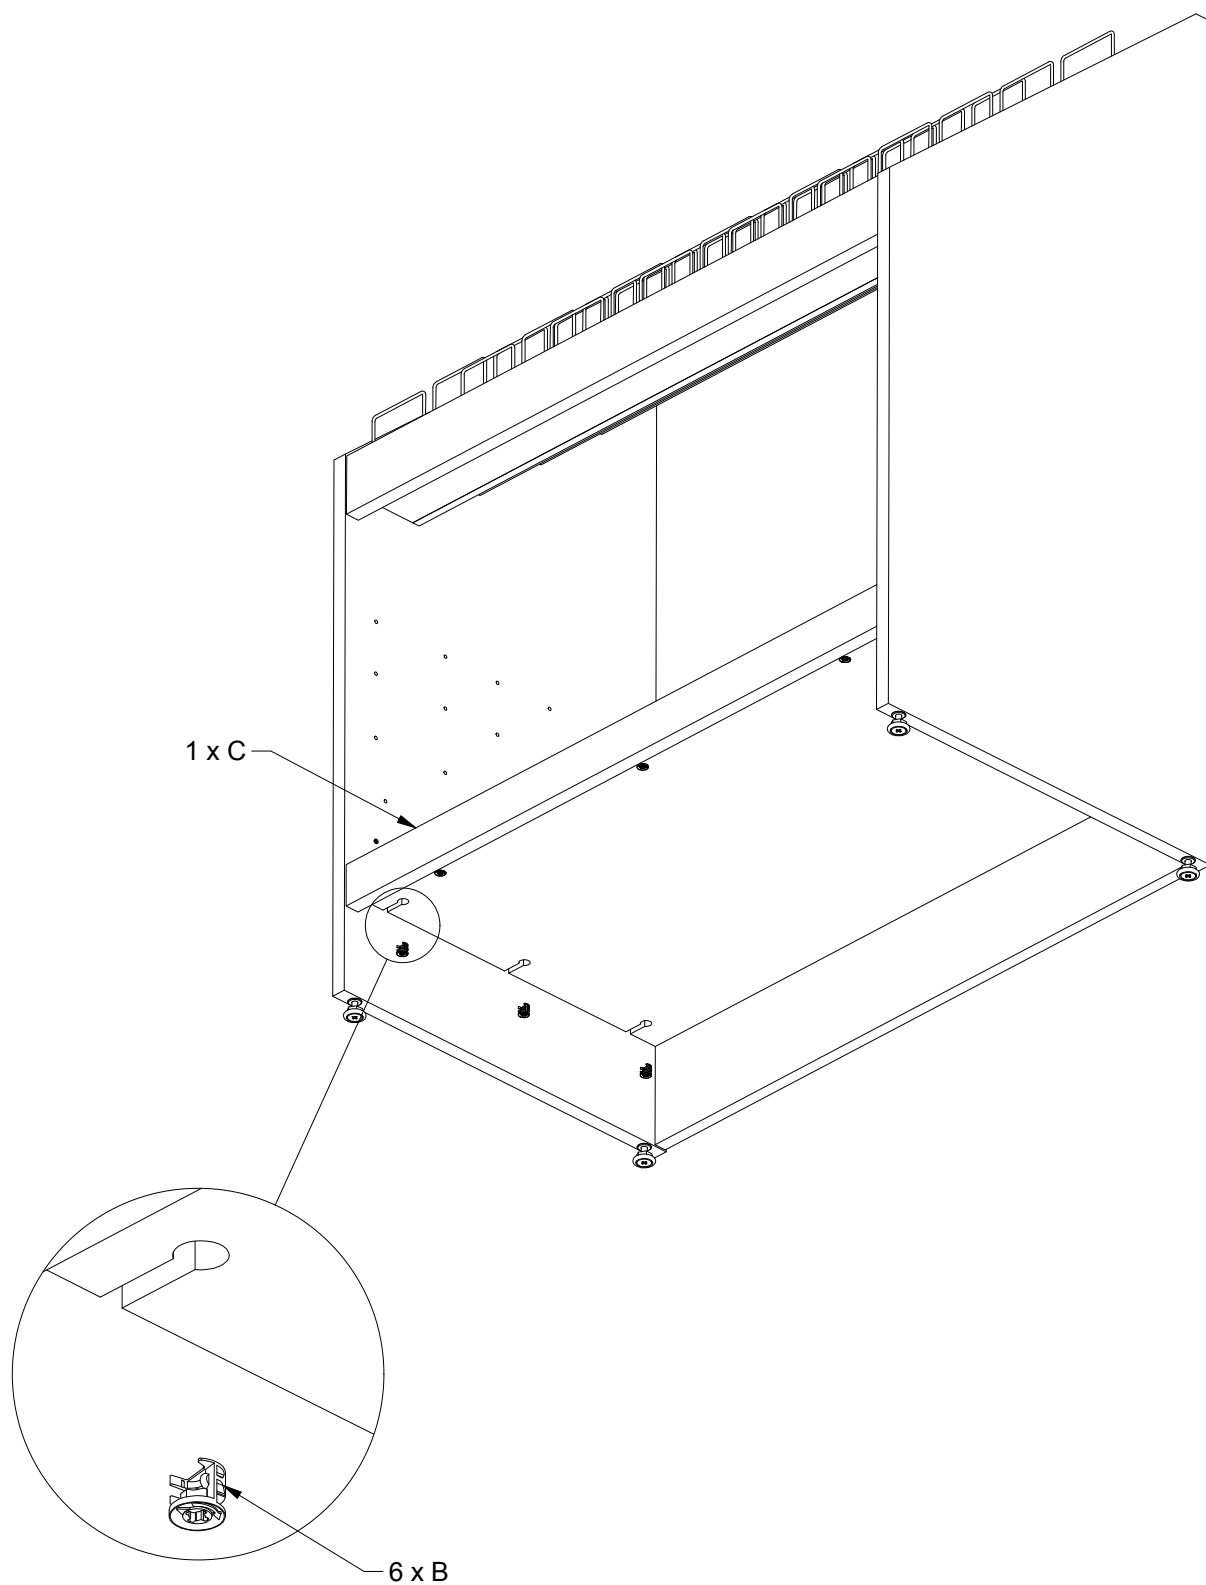


# Assembly Guide

 E37379 / E37380 Malmö CD with drawers  
E37381 / E37382 Malmö CD without drawers

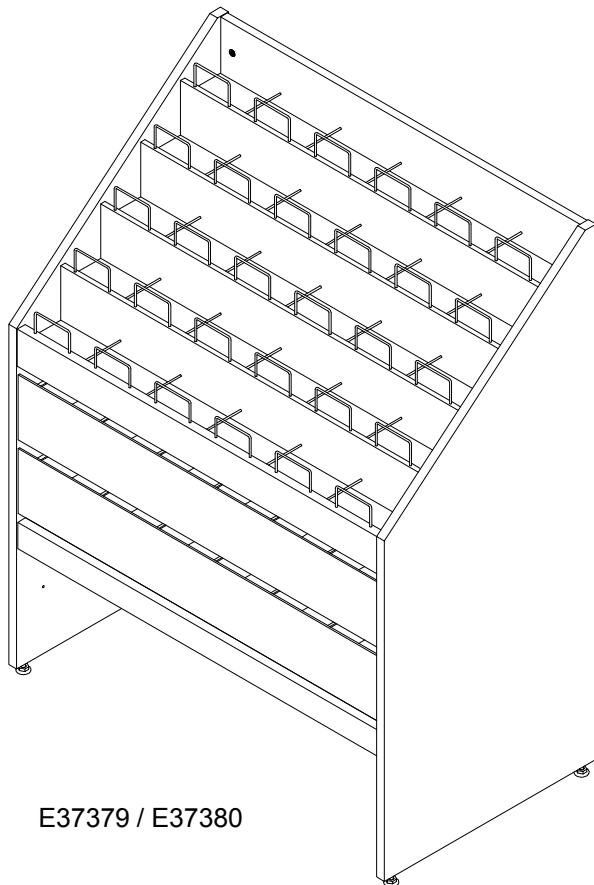

E37379 / E37380

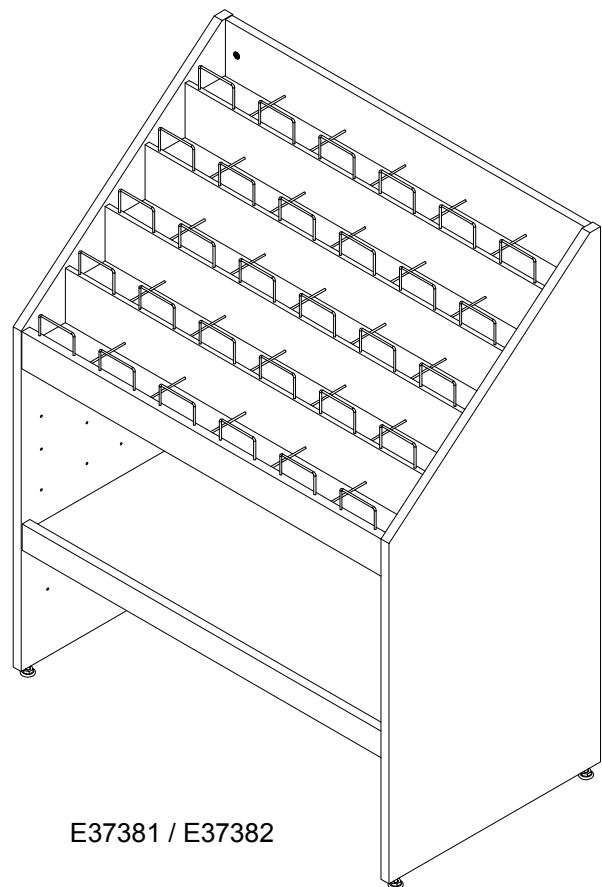 


E37381 / E37382

2018.09

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.


# Assembly Guide
 
## E37379 / E37380 Malmö CD with drawers

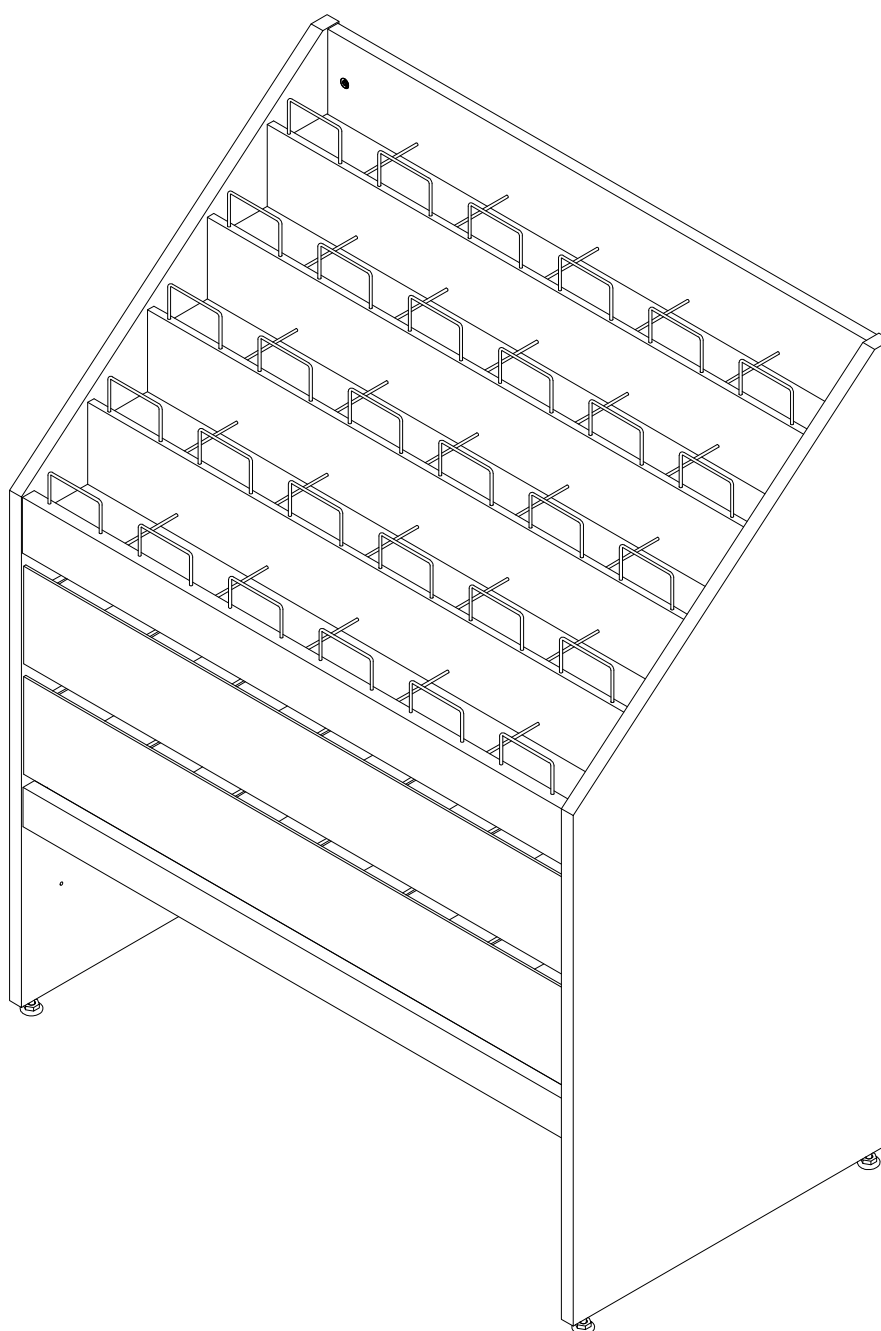


2018.09

 
First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.

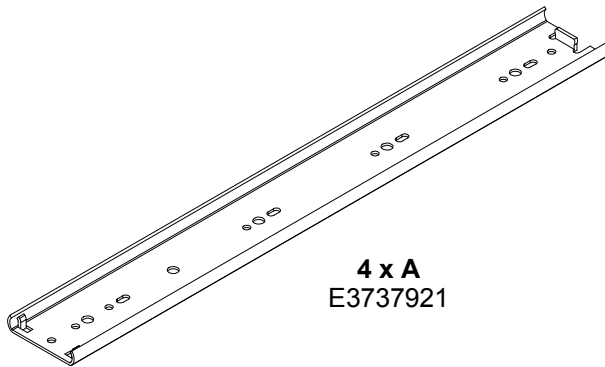


**4 x A**  
E3737921

 


**16 x B**  
E3437925

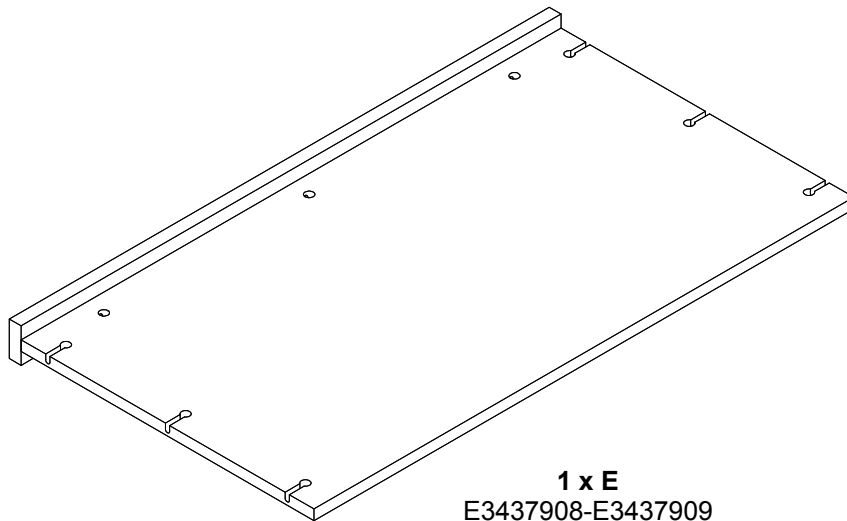 

 
**1 x E**  
E3437908-E3437909  
(Assembl. by supplier)

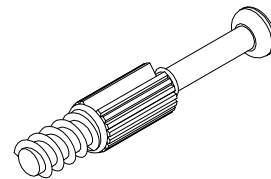

**6 x C**  
E3437925

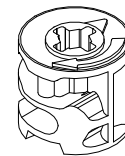 

**6 x D**  
E76402

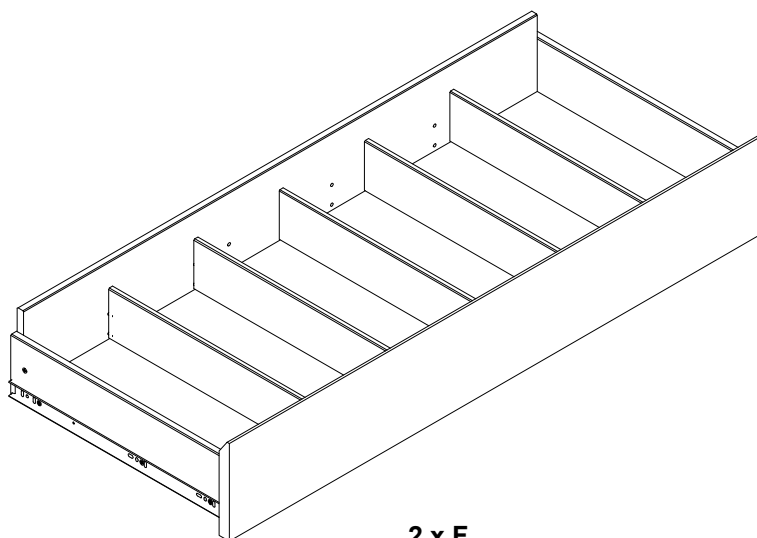 


**2 x F**  
E3437913  
(Assembl. by supplier)



# Assembly Guide

 E37379 / E37380 Malmö CD with drawers  
E37381 / E37382 Malmö CD without drawers

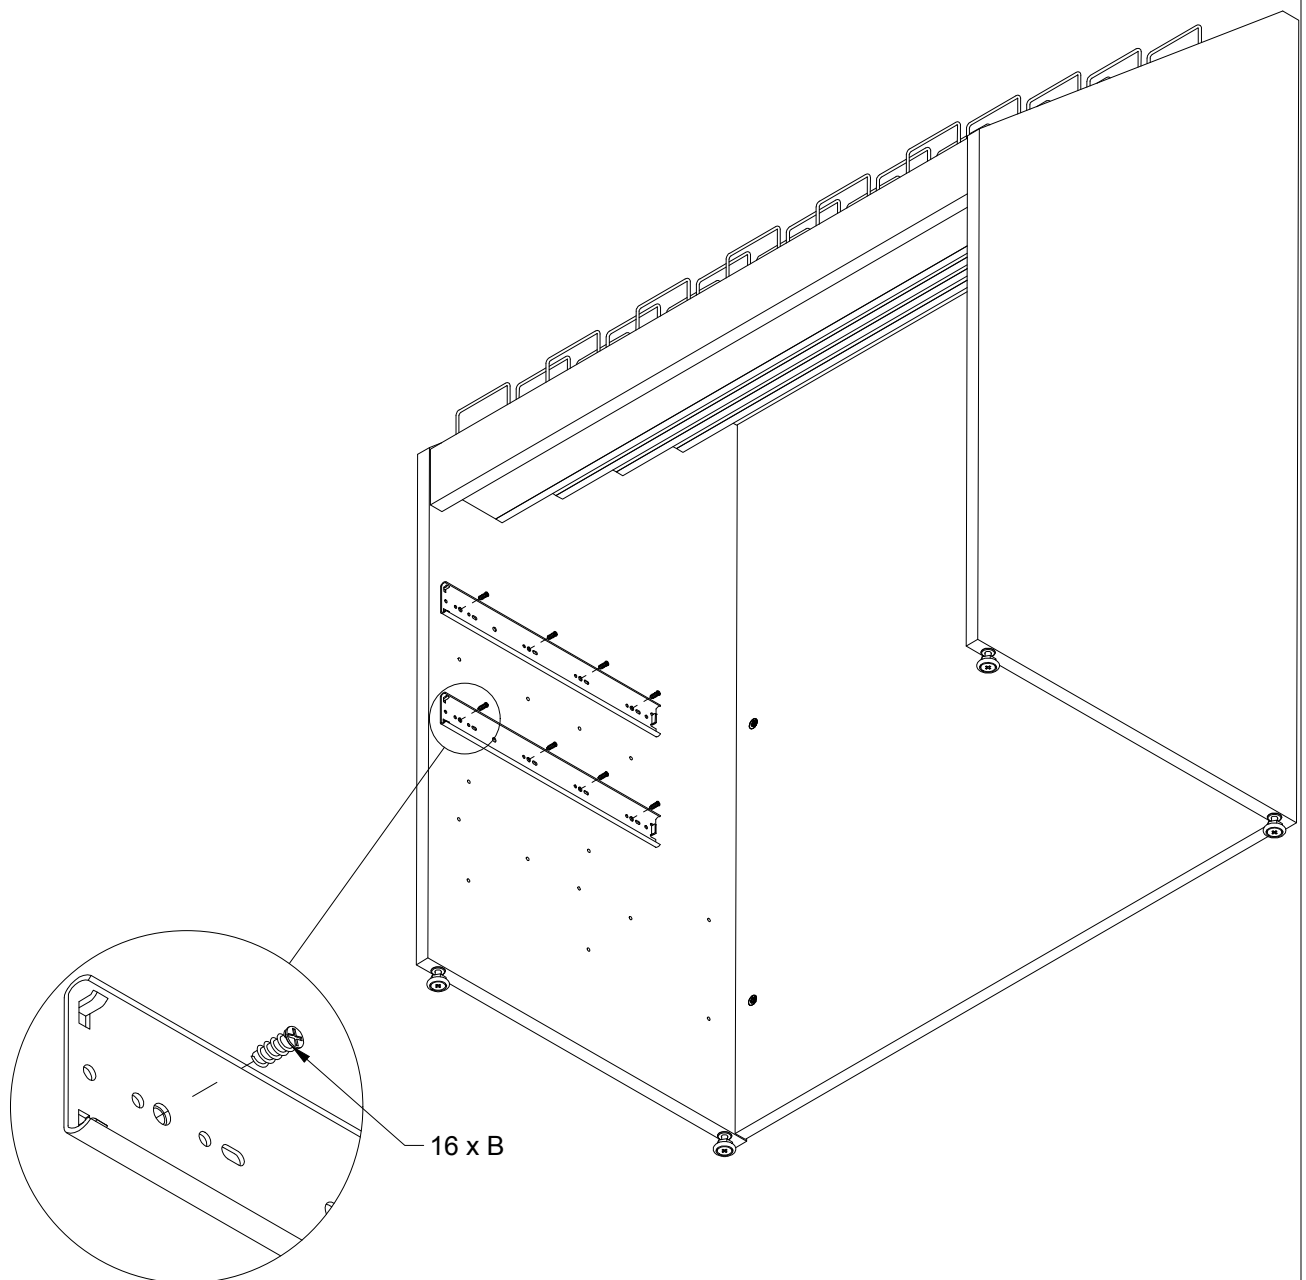


2018.09

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.

# Assembly Guide

 E37379 / E37380 Malmö CD with drawers  
E37381 / E37382 Malmö CD without drawers

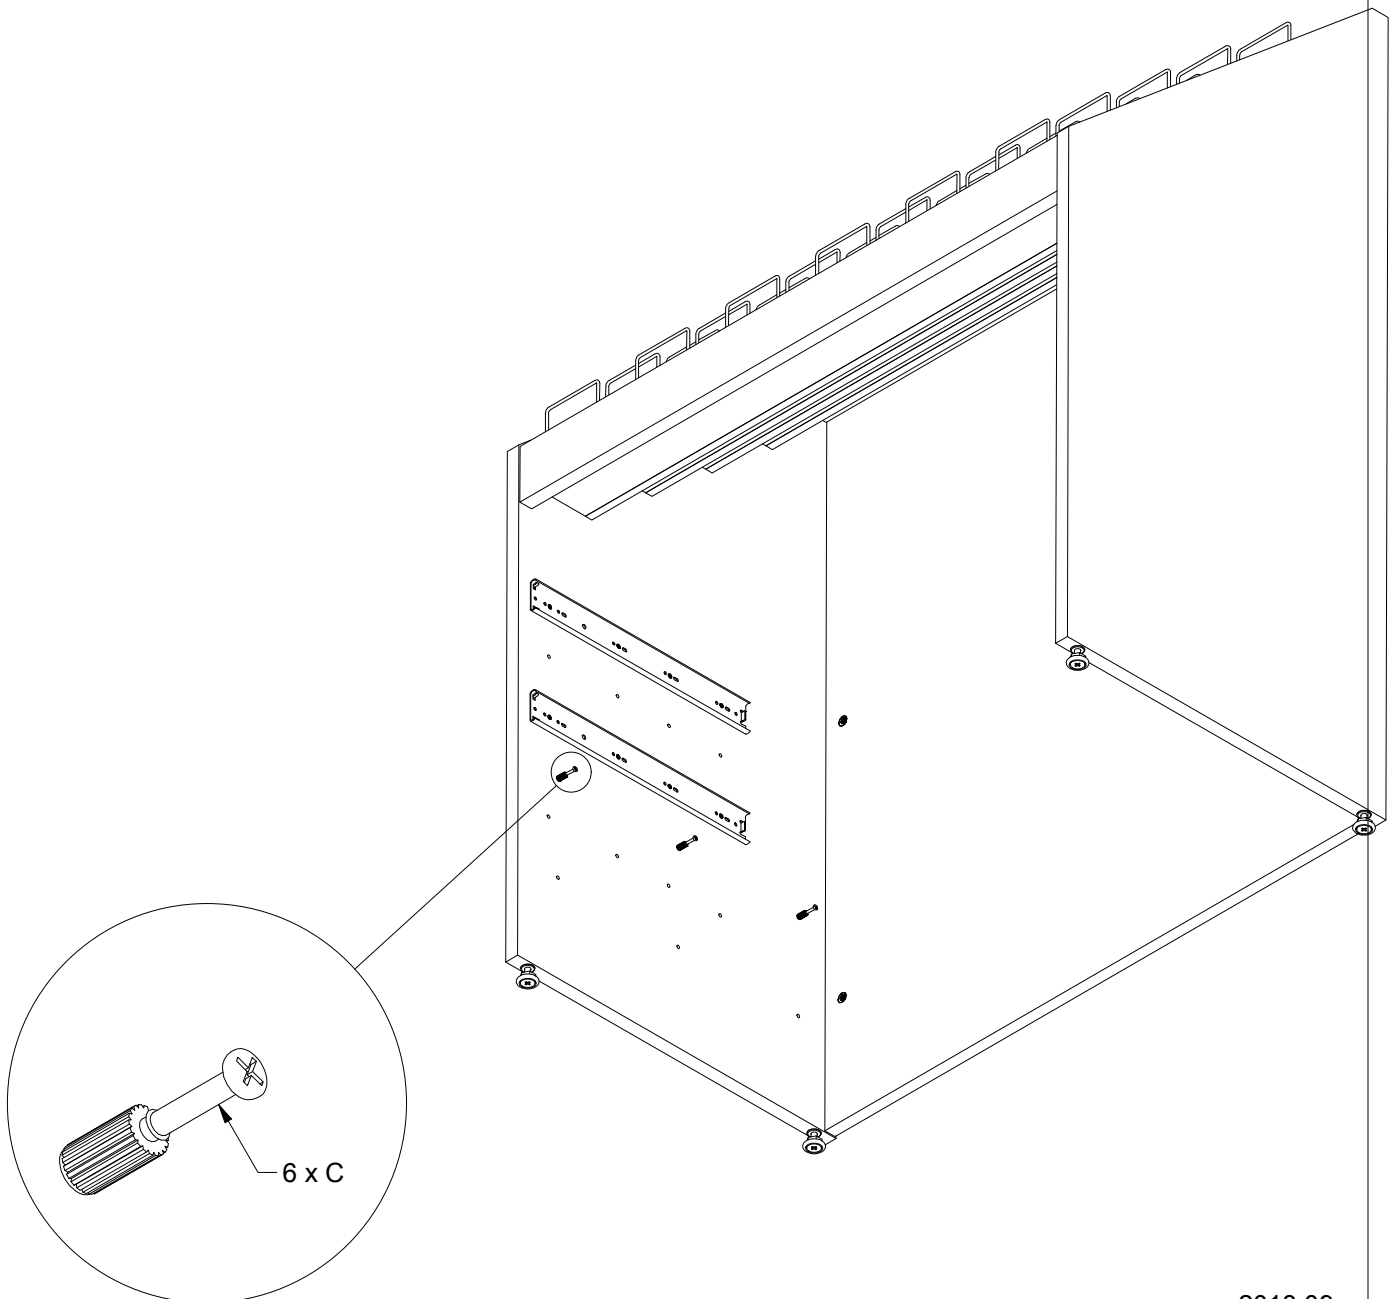


2018.09

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.

# Assembly Guide

 E37379 / E37380 Malmö CD with drawers  
E37381 / E37382 Malmö CD without drawers

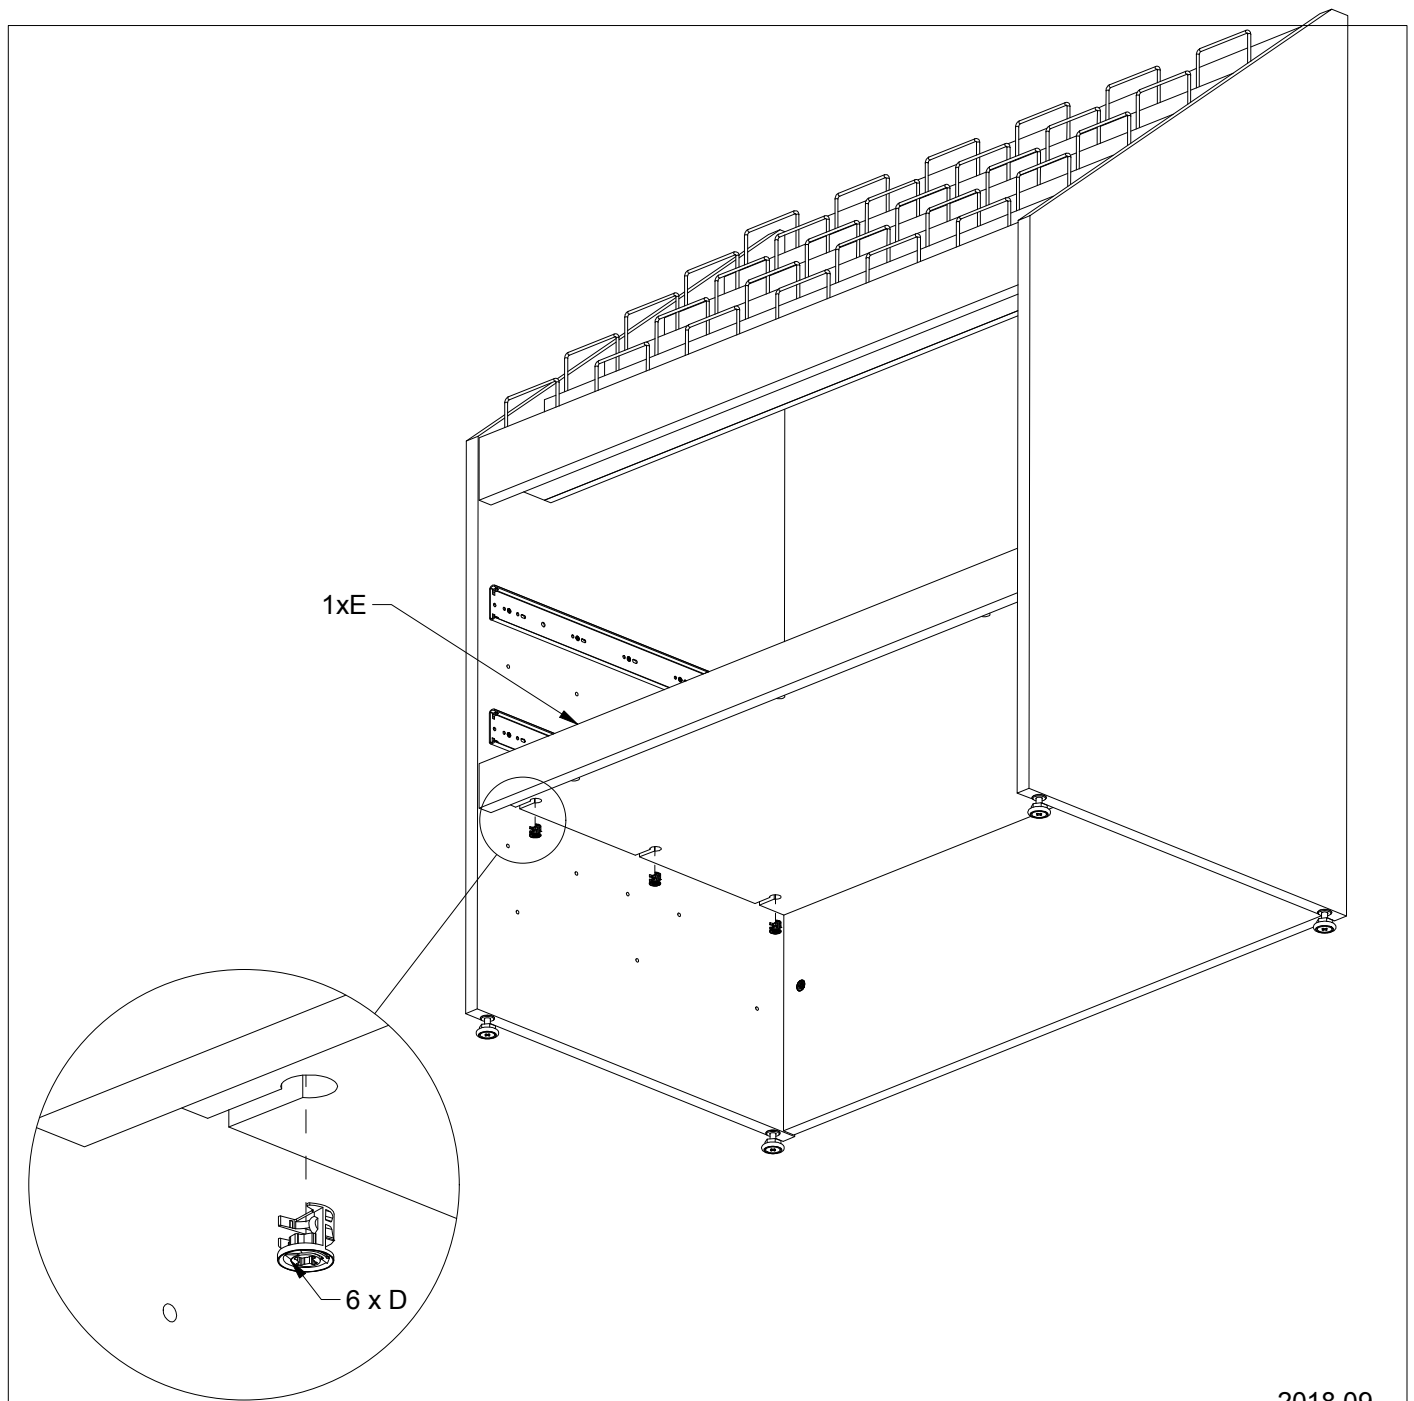


2018.09

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.


# Assembly Guide

 
E37379 / E37380 Malmö CD with drawers  
E37381 / E37382 Malmö CD without drawers

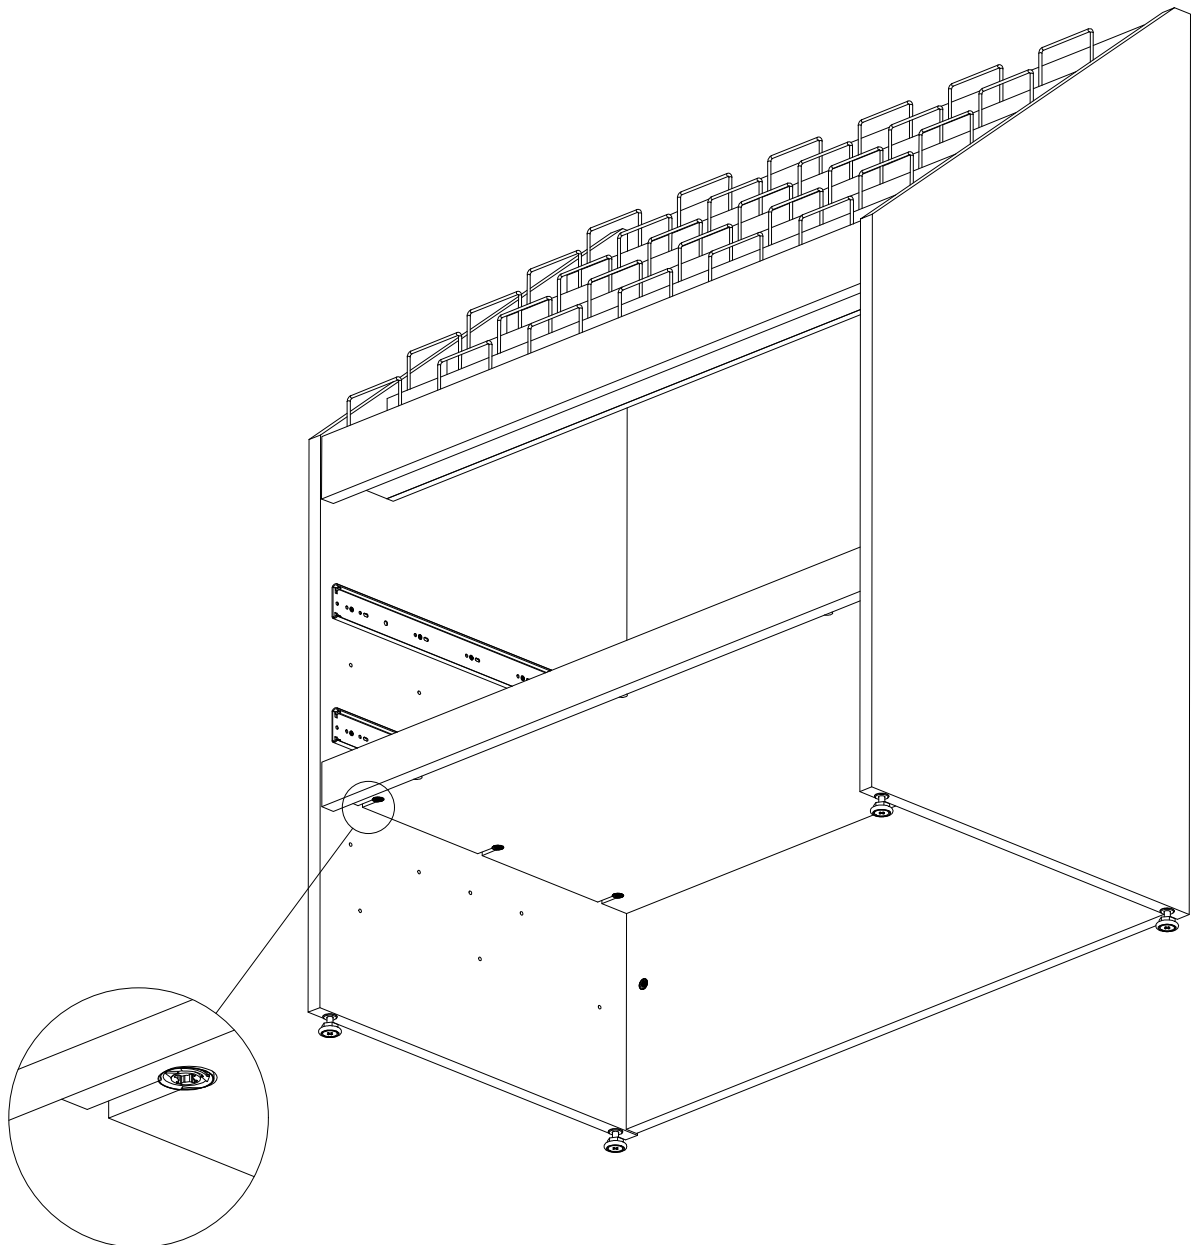


2018.09

   
First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.  
Assemble your furniture step by step, as shown in the illustrations.

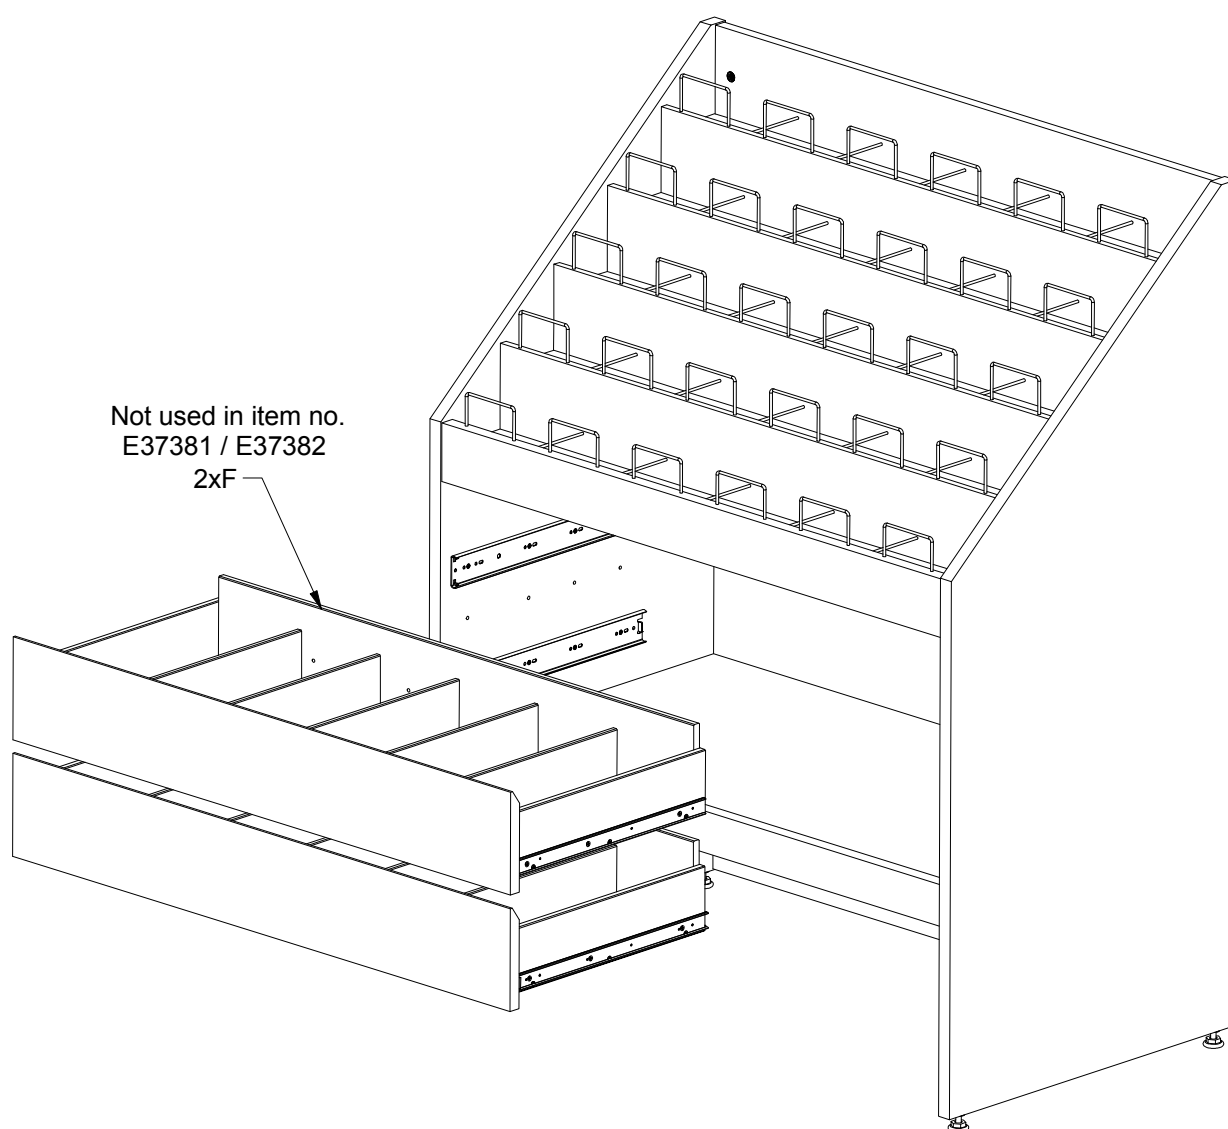

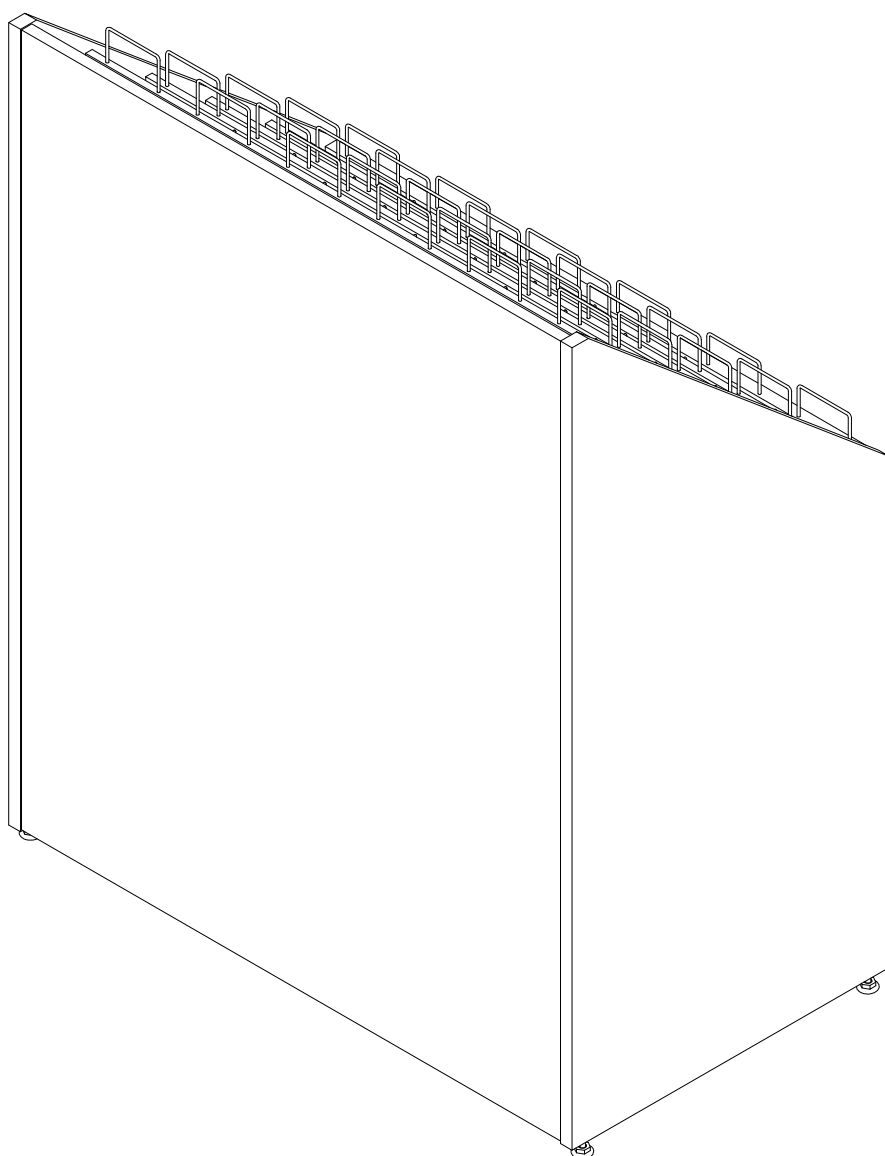


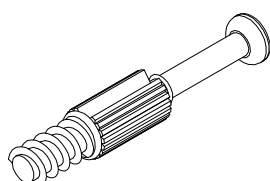

**6 x A**  
E3437925

 

**6 x B**  
E76402

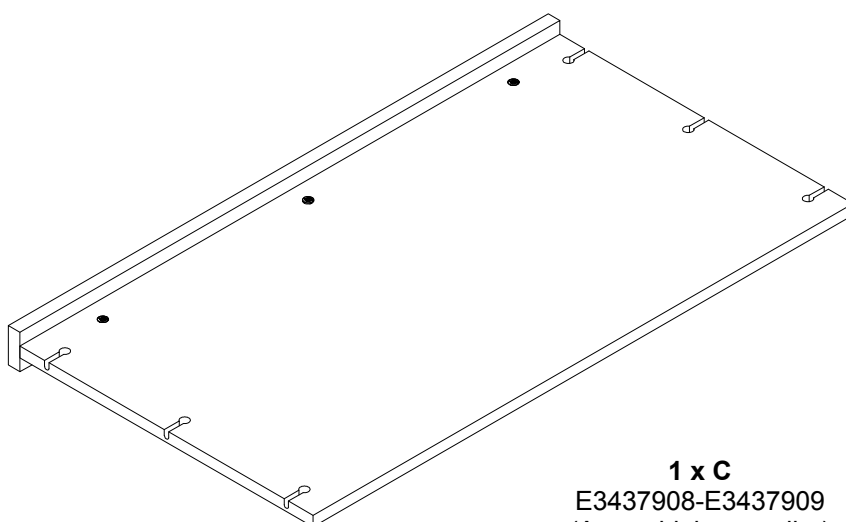 

**1 x C**  
E3437908-E3437909  
(Assembl. by supplier)

