



VONDOM®

Instrucciones para la unión del acolchado en la tumbona FAZ


Padded assembly instructions
in FAZ sunbed

X6 X6

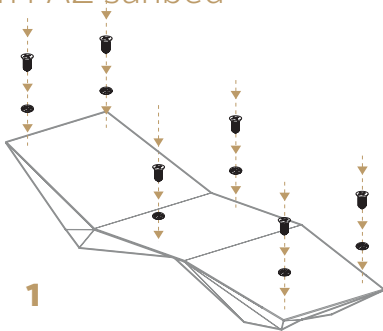

Acolchado con velcro en
la parte posterior.

Padded with hook and
loop system on the back.

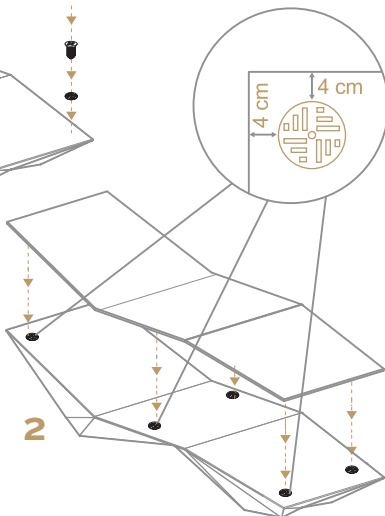

VONDOM S.L.U

Avda. Valencia 3 - 46891 - Palomar - Valencia - Spain

t. +34 96 239 84 86 - f. +34 96 290 05 01

www.vondom.com - info@vondom.com