

VONDOM®

instrucciones de montaje/assembly instructions

Ref. 54015


x4



x4



x4

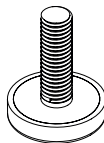

Taladrar y colocar inserto de M8x16, después poner la pata + tuerca de VONDOM

Drill and put M8x16 insert, after thread nug + VONDOM leg

